

Canon

Canon
DIGITAL CAMERA

PowerShot SD990 IS
DIGITAL ELPH
DIGITAL
IXUS 980 IS

Camera User Guide

Canon

PowerShot SD990 IS
DIGITAL ELPH

DIGITAL
IXUS 980 IS

Camera User Guide



ENGLISH



 
CDI-E384

Checking the Package Contents


Check if the following items are included in your camera package. If anything is missing, contact the retailer where you purchased the camera.




Camera



 
**Battery Pack NB-5L
(with Terminal Cover)**



**Battery Charger
CB-2LX/CB-2LXE**

 

**Interface Cable
IFC-400PCU**

 

**AV Cable
AVC-DC400**



**Wrist Strap
WS-DC7**



**Memory Card
(32 MB)**



**Canon Digital Camera
Solution Disk**



**Warranty
Card**



**"Canon Customer
Support" leaflet**



Camera User Guide (This Guide)



Direct Print User Guide

Read when you want to connect the camera to a printer (sold separately) and print.



Software Starter Guide

Read when you want to connect the camera to a computer.



Detailed user guides (PDF format) for using the included ZoomBrowser EX and ImageBrowser programs are available on the Canon website (English only):
<http://web.canon.jp/imaging/information-e.html>

"Use of Genuine Canon Accessories Recommended" Leaflet.



- You can use the included memory card to try out your new camera and take some test shots.
- Adobe Reader is required to view the PDF manuals.

Read This First

Test Shots

Take some initial test shots and play them back to make sure the images were recorded correctly. Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including memory cards, that results in the failure of an image to be recorded or to be recorded in a way that is machine readable.

Warning Against Copyright Infringement

The images recorded with this camera are intended for personal use. Do not record images that infringe upon copyright laws without the prior permission of the copyright holder. Please be advised that in certain cases the copying of images from performances, exhibitions, or commercial properties by means of a camera or other device may contravene copyright or other legal rights even if the image was shot for personal use.

Warranty Limitations

This camera's warranty is only effective in the country of sale. If there is a problem with the camera while abroad, please return it back to the country of sale before proceeding with a warranty claim to a Canon Customer Support Help Desk. For Canon Customer Support contacts, please see the customer support list supplied with your camera.

LCD Monitor

The LCD monitor is produced with extremely high-precision manufacturing techniques. More than 99.99% of the pixels operate to specification, but occasionally non-performing pixels may appear as bright or dark dots. The camera is not damaged. This also has no effect on the recorded image.

Camera Body Temperature

 
Please take care when operating the camera for an extended period as the camera body may become warm. The camera is not damaged.

Memory Cards

This camera can use various types of memory cards. These are collectively referred to as memory cards in this guide.

What Do You Want to Do?

Shoot



- Shoot, leaving it to the camera to make settings 21
- Shoot various scenes 54 – 56

- Take good shots of people



Portraits
(p. 54)



With nightscapes
(p. 54)



Kids and pets
(p. 54)



At the beach
(p. 55)



With snowscapes
(p. 55)

- Take good landscapes



Foliage
(p. 55)



Sunsets
(p. 55)

- Shoot various other scenes



Indoors
(p. 55)



Fireworks
(p. 56)



Aquarium
(p. 56)



Under water
(p. 56)



ISO
3200
Low light
(p. 56)

- Focus on faces 21, 62, 82, 86
- Shoot in places where I cannot use the flash
(turn off the flash) 57
- Shoot pictures with me in them too (self-timer). 61, 62
- Insert the date and time into my shots 60
- Take close-up pictures of subjects (macro shooting) 63
- Take close up pictures of subjects using the zoom
(digital macro shooting). 64
- Take sepia toned or black and white pictures. 73
- Change the size of picture I want to take
(recording pixels). 68
- Take pictures continuously 72
- Shoot without camera shake (image stabilization) 145
- Shoot without camera shake even in low light conditions
(High ISO speed) 56, 70

 
- Take pictures using the viewfinder. 76
- Take pictures of moving subjects using the viewfinder. 79
- Continuously focus on subjects that move (Servo AF) 84
- Adjust dark subjects and shoot (i-Contrast) 91

View




- Look at my pictures. 24
- Automatically play back pictures (slideshow) 107
- Look at pictures on a TV 112
- Quickly search pictures. 104, 105
- Erase pictures 25, 113
- Protect pictures from accidental erasure. 117

Shoot/View Movies




- Shoot movies 28
- View movies 30

 Print



- Easily print pictures. 26

 Save



- Save images to a computer 31, 128

Other



- Turn off sound. 47
- Use the camera abroad. 13, 139

Table of Contents


Chapters 1 – 3 explain the basic operations and frequently used functions of this camera. Chapters 4 and on explain the advanced functions, letting you learn further as you read each chapter.

Checking the Package Contents	2
Read This First	3
What Do You Want to Do?	4
LCD Monitor Precautions.....	8
Safety Precautions.....	9

1 Getting Started 11







Charging the Battery.....	12
Inserting the Battery and Memory Card	14
Setting the Date and Time	17
Setting the Display Language.....	19
Pressing the Shutter Button.....	20
Taking Pictures	21
Viewing Images	24
Erasing Images.....	25
Printing Images.....	26
Shooting Movies	28
Viewing Movies.....	30
Downloading Images to a Computer	31
Accessories	36
Separately Sold Accessories	38

2 Learning More.....39



Components Guide.....	40
Information Displayed on the Screen	42
Indicators	44
 FUNC. Menu – Basic Operations	45
MENU MENU – Basic Operations ..	46




















 
 
Changing the Sound Settings	47
Changing the Screen Brightness	48
Returning the Camera to Default Settings	49
Formatting Memory Cards	50
Power Saving Function (Auto Power Down).....	51
Changing the Image Display Time ..	52
Clock Functions.....	52







3 Shooting Special Scenes and Using Common Functions 53

SCN Shooting Various Scenes	54
 Turning the Flash Off.....	57
 Zooming in More Closely on Subjects (Digital Zoom).....	58
Inserting the Date and Time	60
 Using the Self-Timer.....	61
 Using the Face Self-Timer.....	62
 Shooting Close-ups (Macro).....	63
 Zooming In on Close Subjects (Digital Macro).....	64

4 Making Settings for the Images You Want..... 65


P Shooting in Program AE	66
 Turning the Flash On.....	67
 Shooting Far Away Subjects (Infinity)	67
Changing the Recording Pixels (Image Size).....	68

Changing the Image Quality (Compression Ratio).....	68
ISO Changing the ISO Speed.....	70
Adjusting the Tone (White Balance).....	71
Adjusting the Brightness (Exposure Compensation).....	72
 Continuous Shooting.....	72
Changing the Tone of an Image (My Colors).....	73
 Shooting Using the Two Second Self-Timer.....	74
 Customizing the Self-Timer.....	75
Shooting Using the Viewfinder.....	76
Shooting Using a TV.....	76
Shoot While Checking the Histogram.....	77
Changing the Composition to Shoot (Focus Lock).....	78
Shooting with  (Quick Shot).....	79
5 Using Advanced Shooting Functions 81	
Changing the AF Frame Mode.....	82
Shooting With Magnified Focus Display.....	83
AF L Shooting with AF Lock.....	84
Shooting with Servo AF.....	84
MF Manual Focus.....	85
 Selecting the Person to Focus On (Face Select).....	86
Changing the Metering Mode.....	87
AEL Shooting with AE Lock.....	87
FEL Shooting with FE Lock.....	88
 Flash Exposure Compensation..	88
M Setting the Shutter Speed and Aperture Value.....	89
Setting the Flash Output.....	90
 Adjusting Dark Subjects and Shooting (i-Contrast).....	91
 Red-Eye Correction.....	92
Changing the Color and Shooting... ..	93
 Shooting Stitch Assist Images.....	96
6 Using Various Functions for Shooting Movies..... 97	
Changing the Movie Mode.....	98
Changing the Image Quality.....	98
AE Lock/Exposure Shift.....	99
Other Shooting Functions.....	100
Playback Functions.....	100
 Editing.....	101
7 Using Various Playback and Other Functions 103	
 Search Images by Sets of 9 (Index Display).....	104
 Searching for Images Using the Jump Display.....	105
 Viewing Slideshows.....	107
Checking the Focus or People's Expressions (Focus Check).....	110
 Magnifying Images.....	111
 Changing Image Transitions.....	111
Viewing Images on a TV.....	112
 Erasing All Images.....	113
 Protecting Images.....	117
 Organizing Images by Category (My Category).....	119
 Rotating Images.....	120
 Resizing Images.....	121
 Trimming.....	122

 Adding Effects With the My Colors Function.....	123
 Adjusting Dark Subjects (i-Contrast).....	124
 Correcting Red-Eye Effect.....	125
 Attaching Sound Memos.....	127
Transferring Images to a Computer.....	128
 Designating Images for Transfer (DPOF).....	129
Print List (DPOF).....	131
Designating Images for Printing (DPOF).....	132
 Sound-Only Recording (Sound Recorder).....	135

8 Customizing the Camera ..137

Changing Functions.....	138
-------------------------	-----


Changing Shooting Functions.....	142
Changing Playback Functions.....	146
 Changing the Start-up Image or Sound (My Camera Settings).....	147

9 Useful Information for Using the Camera 149

Using Household Power.....	150
Using a Supplementary Flash.....	150
You Think There is a Problem.....	151
List of Messages That Appear on the Screen.....	154
Functions Available in Each Shooting Mode.....	156
Menus.....	158
Handling Precautions.....	162
Specifications.....	163
Index.....	166

LCD Monitor Precautions

- **Do not sit in a chair with the camera in your pocket.**
Doing so may cause malfunction or damage the LCD monitor.
- **When putting the camera in your bag, ensure that hard objects do not come into contact with the LCD monitor.**
If this occurs, it may cause malfunction or damage the LCD monitor.
- **Do not attach accessories to the strap.**
Doing so may cause malfunction or damage the LCD monitor.

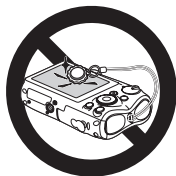

Safety Precautions

- Before using the camera, please ensure that you read the safety precautions described below and in the “Safety Precautions” section. Always ensure that the camera is operated correctly.
- The safety precautions noted on the following pages are intended to prevent injuries to yourself and other persons, or damage to the equipment.
- Be sure to also check the guides included with any separately sold accessories you use.



Warnings Denotes the possibility of serious injury or death.



Cautions Denotes the possibility of injury or damage to the equipment.

Warnings

Camera

- **Do not look through the camera viewfinder at bright light sources (the sun, etc.).**
This may damage eyesight.
- **Store this equipment out of the reach of children and infants.**
Strap: Putting the strap around a child's neck could result in asphyxiation.
Memory card, day/date battery: Dangerous if accidentally swallowed. If this occurs, contact a doctor immediately.
- **Do not trigger the flash in close proximity to human eyes.**
Exposure to the intense light produced by the flash may damage eyesight. In particular, remain at least one meter (39 inches) away from infants when using the flash.
- **Do not attempt to disassemble or alter any part of the equipment that is not expressly described in this guide.**
- **To avoid the risk of injury, do not touch the interior of the camera if it has been dropped or otherwise damaged.**
- **Stop operating the camera immediately if it emits smoke, a strange smell, or otherwise behaves abnormally.**
- **Do not allow liquids or foreign objects to enter the camera.**
This could result in fire or electrical shock.
If liquid or foreign objects come into contact with the camera interior, immediately turn the camera power off and remove the battery.
- **Do not use organic solvents such as alcohol, benzene, or thinner to clean the equipment.**
- **Use only recommended power sources.**

Battery, Battery Charger

- **Use only recommended batteries.**
- **Do not place the battery near or in direct flame.**
- **Do not let the battery come into contact with water (e.g. sea water) or other liquids.**
- **Do not attempt to disassemble, alter or apply heat to the battery.**

Safety Precautions

- **Avoid dropping or subjecting the battery to severe impacts.**
This may cause explosions or leaks, resulting in fire, injury and damage to the surroundings. In the event that a battery leaks and the eyes, mouth, skin or clothing contacts these substances, immediately flush with water and seek medical assistance. If the battery charger becomes wet, unplug it from the outlet and consult your camera distributor or the closest Canon Customer Support Help Desk.
- **Unplug the battery charger from the power outlet after recharging is complete, or when you are not using it.**
- **Do not place anything, such as cloth on top of the battery charger while it is charging.**
Leaving the unit plugged in for a long period of time may cause it to overheat and distort, resulting in fire.
- **Use only the specified battery charger to charge the battery.**
- **Do not cut, damage, alter or place heavy items on the power cord.**
- **Unplug the power cord periodically and wipe away any dust and dirt that has collected on the plug, the exterior of the power outlet, and the surrounding area.**
- **Do not handle the power cord with wet hands.**
This could result in fire or electrical shock.
- **Before you discard batteries, cover the terminals with tape or other insulators.**
Contacting other metal materials in waste containers may lead to fire or explosions.

Cautions


- **Do not aim the camera at bright light sources (the sun, etc.).**
Doing so may cause malfunction or damage the image sensor (CCD).
- **Be careful not to bang the camera or subject it to strong impacts or shocks when hanging it by the strap.**
- **Be careful not to bump or push strongly on the lens.**
This could lead to injury or damage the camera.
- **When using the camera on a beach or at a windy location, be careful not to allow dust or sand to enter the camera.**
This may cause the camera to malfunction.
- **Do not use the equipment in a manner that exceeds the rated capacity of the electrical outlet or wiring accessories. Do not use if the power cord or plug are damaged, or if not fully plugged into the outlet.**
- **Avoid using, placing or storing the camera in the following places.**
 - Places subject to strong sunlight.
 - Places subject to temperatures above 40° C (104° F).
 - Humid or dusty areas.These could cause leakage, overheating or explosion, resulting in fire, burns or other injuries. High temperatures may also cause deformation of the casing.
- **Do not allow dirt or metal objects (such as pins or keys) to contact the charger terminals or plug.**
This could result in fire, electrical shock or other damage.
- **Do not use the flash with dirt, dust or other items stuck to the surface, or when covering the flash with your fingers or clothing.**
This may cause the camera to malfunction.

Getting Started

This chapter explains preparations before shooting, how to shoot in **AUTO** mode, and then how to view, erase and print the images you take. The latter part of this chapter explains how to shoot and view movies, and how to download images to a computer.


Attaching the Strap/Holding the Camera

- Attach the included strap and place it around your wrist to avoid dropping the camera during use.
- Keep your arms tight against your body while holding the camera firmly by the sides. Be sure that your fingers do not block the flash.

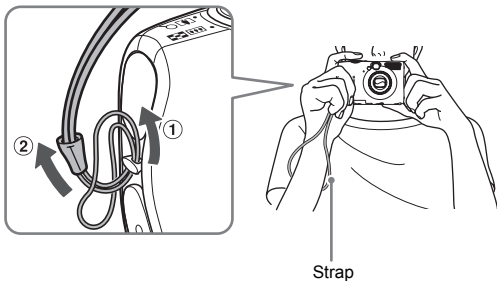


Charging the Battery

 Use the included charger to charge the battery.




1 Remove the cover.

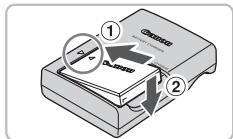



2 Insert the battery.

- Align the ▲ marks on the battery and charger, then insert the battery by sliding it in ① and down ②.

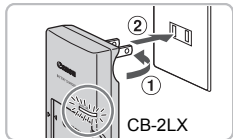

3 Charge the battery.

- Flip out the plug ① and plug it into a power outlet ② (for CB-2LX).
- Plug the power cord into the charger, then plug the other end into a power outlet (for CB-2LXE).
- ▶ The charge lamp lights red, and charging starts.
- The charge lamp will light green when charging has finished. Charging takes approx. 2 hours and 5 minutes.

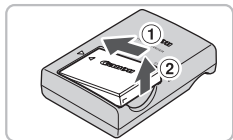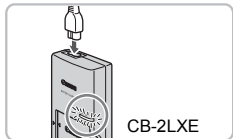

4 Remove the battery.

- Unplug the battery charger from the power outlet, then remove the battery by sliding it in ① and up ②.



To protect the battery and prolong its life, do not charge it for longer than 24 hours continuously.

Approximate Number of Shots That Can Be Taken




Number of shots	LCD monitor on.*	280
	LCD monitor off.	700
Playback Time (Hours)		6

* The number of shots that can be taken is based on the Camera & Imaging Products Association (CIPA) measurement standard.

- Depending on the shooting conditions, the number of shots that can be taken may be less.

Battery Charge Indicator


An icon or message will appear on the screen (p. 42) indicating the battery's charge state.

Display	Summary
	Good.
	Slightly depleted, but sufficient.
 (Blinking red)	Nearly depleted.
"Change the battery pack."	Depleted. Recharge the battery.



Using the battery and charger effectively

 - Charge the battery on the day, or the day before, it will be used. Charged batteries continue to discharge naturally even if they are not used.




Attach the cover to a charged battery so that the ▲ mark is visible.

- How to store the battery for long periods. Deplete and remove the battery from the camera. Attach the terminal cover and store the battery. Storing a battery without depleting it for long periods of time (about one year) may shorten its life span or affect its performance.
- The battery charger can also be used when abroad. The charger can be used in regions that have 100 – 240 V (50/60 Hz) AC power. If the plug does not fit the outlet, use a commercially available plug adapter. Do not use devices such as electrical transformers for foreign travel because they will cause malfunctions.
- If the battery is quickly depleted even after charging, it has reached the end of its life span. Purchase a new battery.


Inserting the Battery and Memory Card

Insert the included battery and memory card into the camera.

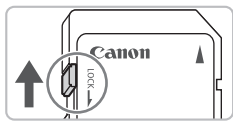


1 Check the card's write-protect tab.

 - If the memory card has a write-protect tab, you will not be able to take images if the tab is in the locked position. Slide the tab up until you hear a click.



2 Open the cover.


- Slide the cover ①, and open it ②.

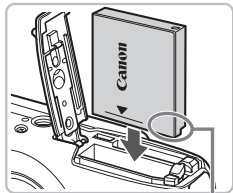

3 Insert the battery.

- Insert the battery as shown until it locks into place with a click.
- Be sure to insert the battery in the correct direction or it will not properly lock into place.


Terminals

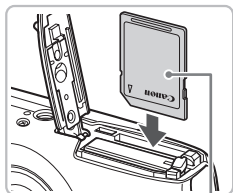

4 Insert the memory card.

- Insert the memory card as shown until it locks into place with a click.
- Inserting the card in the wrong direction could damage the camera. Be sure the card is oriented correctly.

 
Label



5 Close the cover.


- Close the cover ①, and slide it ② until it locks into place with a click.

Removing the Battery and Memory Card

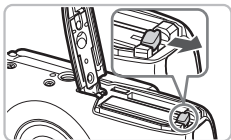

1 Remove the battery.

- Open the cover and press the battery lock in the direction of the arrow.
- ▶ The battery will pop up.

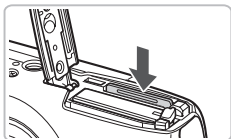

2 Remove the memory card.

- Push the memory card in until you hear a click, then slowly release it.
- ▶ The memory card will pop up.

Approximate Number of Shots per Memory Card

Memory Card	32 MB (Supplied)	2 GB	8 GB
Number of shots	7	516	2063

- Values are based on a camera at default settings.
- The number of shots that can be taken will vary depending on camera settings, the subject and the memory card used.


? Can you check the number of shots that can be taken?

You can check the number of shots that can be taken when the camera is in a Shooting Mode (p. 21).



Number of shots that can be taken

Compatible Memory Cards

 
- SD memory cards
-  SDHC memory cards
- MultiMediaCards
- MMCplus memory cards
- HC MMCplus memory cards

? What is the write-protect tab?

SD and SDHC memory cards have a write-protect tab. If this tab is in the locked position, [Card Locked!] will appear on the screen and you will not be able to take or erase images.

Setting the Date and Time

The Date/Time settings menu will appear the first time the camera is turned on. Since the date and time recorded into your images are based on these settings, be sure to make them.




1 Turn on the camera.

- Press the power button.
- ▶ The Date/Time settings menu will appear.




2 Set the date and time.

- Press the ◀▶ buttons to select an option.
- Press the ▲▼ buttons or turn the  dial to set a value.



3 Make the setting.

- Press the  button.
- ▶ Once the date and time have been set, the Date/Time settings menu will close.
- Pressing the power button will turn off the camera.






Reappearing Date/Time settings menu

Set the correct date and time. If you have not set the date and time, the Date/Time settings menu will appear each time you turn on the camera.

 


Daylight saving time settings

In Step 2, if you select  and press the ▲▼ buttons, or turn the  dial, and set , daylight saving time (plus 1 hour) will be set.


Changing the Date and Time

You can change the current date and time settings.




1 Display the menus.

- Press the **MENU** button.

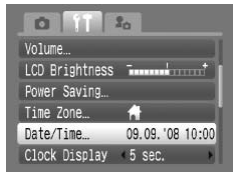

2 Select [Date/Time] in the **↑↑** tab.

 - Press the **◀▶** buttons to select the **↑↑** tab.
- Press the **▲▼** buttons or turn the **◉** dial to select [Date/Time], then press the **FUNC/SET** button.



3 Change the date and time.

- Follow Steps 2 and 3 on p. 17 to make the setting.
- Pressing the **MENU** button will close the menu.

 


Date/Time battery

- The camera has a built-in date/time battery (backup battery) that allows the date/time settings to be retained about three weeks after the battery pack has been removed.
- By inserting a charged battery or connecting an AC adapter kit (sold separately) (p. 38), the date/time battery can be charged in about 4 hours even if the camera is not turned on.
- If the date/time battery is depleted, the Date/Time menu will appear when you turn the camera on. Follow the steps on p. 17 to set the date and time.


Setting the Display Language

You can change the language displayed in the LCD monitor menus and messages.



1 Display the language setting menu.

 - Press the button.
- Press and hold the button ①, then immediately press the **MENU** button ②.



2 Set the display language.

- Press the buttons or turn the dial to select a language, then press the button.
- ▶ The displayed language will change.



? What if the clock appears when the button is pressed?

 
The clock (p. 52) will display if the time from when you press the button to when you press the **MENU** button in Step 1 is too long. If the clock appears, press the button to remove the clock and perform Step 1 again.



You can also change the display language by pressing the **MENU** button, selecting the tab, then selecting the [Language] menu item.


Pressing the Shutter Button

The shutter button has two stops. To take images that are in focus, be sure to first press the shutter button lightly (halfway) to focus, then take the shot.



1 Press halfway (lightly to the first stop).

 - ▶ The camera focuses and automatically makes necessary settings for shooting, such as adjusting brightness and color.
- ▶ When the camera focuses, it will beep twice and the indicator will light green.



2 Press fully (to the second stop).

- ▶ The camera plays the shutter sound and takes the shot.
- Since the shot is being taken while the shutter sound plays, be careful not to move the camera.



Does the length of the shutter sound change?

- Since the time required to shoot differs depending on the scene you want to shoot, the length of the shutter sound may change.
- If the camera or subject move while the shutter sound is playing, the recorded image may be blurry.



If you just press the shutter button fully without pausing halfway, the images you take may not be in focus.

Taking Pictures

 
The camera can automatically make all settings so that you can take images just by pressing the shutter button.

Also, when taking pictures of people, the face will be automatically detected and focused (p. 82), and the color and the brightness will adjust to the optimum levels.





1 Set the **AUTO** mode.

- Set the mode dial to **AUTO**.




2 Compose the shot of your subject.

- Moving the zoom lever towards [1] will zoom in on your subject making it appear larger. Moving the lever towards [2] will zoom out from your subject making it appear smaller.
- ▶ When faces are detected, a white frame appears on the face the camera judges to be the main subject, while gray frames appear on other detected faces.

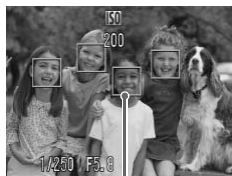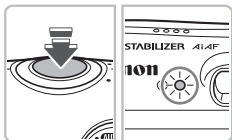

AF Frames

 

3 Focus.

- Press the shutter button halfway to focus.
- ▶ When the camera focuses, it will beep twice and the indicator will light green (orange when the flash will fire).
- ▶ A green frame will appear where the camera focused.
- ▶ Several AF frames will appear when the camera focuses on more than one point.

4 Shoot.

- Press the shutter button fully. The camera will play the shutter sound and shoot.
- ▶ The flash will automatically fire in low light conditions.
- ▶ The indicator will blink green while the image is recorded to the memory card.
- ▶ The image will appear on the screen for about two seconds.
- Even when an image is displayed, you can take a second picture by pressing the shutter button.

**What if...**

- **Nothing displays when the camera is turned on?**

Press the **DISP.** button to turn on the LCD monitor.

- **The camera does not play any sounds?**

Pressing the **DISP.** button while turning on the camera power will turn off all sounds except for warning sounds. To turn on sound, press the **MENU** button, select the **Y↑** tab, and then select the [Mute]. Use the **◀▶** buttons to select [Off].

- **The image comes out dark even if the flash fired when shooting?**

Subject is too far away for the flash to reach. Shoot within the effective flash range of approximately 50 cm – 4.6 m (1.6 – 15 ft.) at maximum wide angle, and approximately 50 cm – 2.4 m (1.6 – 7.9 ft.) at maximum telephoto.

- **The indicator blinks yellow, and the camera beeps once when the shutter button is pressed halfway?**

The subject is too close. Back up approximately 50 cm, press the shutter button halfway, and shoot when the indicator is not blinking yellow.

- **The lamp lights when the shutter button is pressed halfway.**

 
To reduce red-eye and to assist in focusing, the lamp may light when shooting in dark areas (pp. 142 – 143).

- **⚡ appears on the screen and the shot cannot be taken even though the shutter button was pressed fully.**


The flash is charging. Keep the shutter button pressed fully, after a while the indicator will light orange and the camera will take the shot.

Viewing Images

You can view the images you have taken on the screen.










1 Set the playback mode.

- Press the  button.
- ▶ The last image you took will appear.




2 Select an image.

- Pressing the  button will cycle through the images in the reverse order they were taken.
- Pressing the  button will cycle through the images in the order they were taken.
- The images change more quickly if you keep the  buttons pressed, but they will appear coarse.
- The screen on the left will appear when you turn the  dial. Turning it counter-clockwise displays images in the reverse order they were taken, while turning it clockwise displays images in the order they were taken.
- The central image will be displayed full-size when you stop turning the  dial.
- Pressing the  button while the lens is extended will return you to the shooting screen.
- When approximately 1 minute elapses, the lens will retract. If you press the  button with the lens retracted, the power will turn off.

 


Switching to and from playback mode

Pressing the  button while the camera is off, turns the camera on in playback mode. Pressing it again turns the camera off. Pressing the shutter button halfway while in playback mode will bring you to the shooting screen.

Erasing Images

You can select and erase images one at a time. Please note that erased images cannot be recovered. Exercise adequate caution before erasing an image.






1 Set the playback mode.

- Press the  button.












2 Select an image to erase.

- Press the   buttons or turn the  dial to display an image to erase.

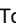

3 Erase the image.

- Press the  button.
- ▶ [Erase] appears.
- Press the   buttons or turn the  dial to select [Erase], then press the  button.
- ▶ The displayed image will be erased.
- To exit instead of erasing, press the   buttons or turn the  dial to select [Cancel], then press the  button.




Printing Images

You can easily print the images you have taken if you connect the camera to a PictBridge compliant printer (sold separately).

Items to Prepare

- Camera and PictBridge compliant printer (sold separately)
- Interface cable supplied with the camera (p. 2)

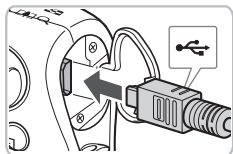

- 1 Turn off the camera and printer.**
- 2 Connect the camera to the printer.**





- Open the cover, and insert the small end of the plug firmly into the camera terminal in the direction shown.
- Insert the cable's larger plug into the printer. For connection details, refer to the user guide provided with the printer.

- 3 Turn on the printer.**




- 4 Press the  button and turn on the camera.**

- ▶  **SET** will appear on the screen, and the  button will light blue.







5 Select an image to print.

- Press the ◀▶ buttons or turn the  dial to select an image.



6 Print images.

- Press the  button.
- ▶ Printing will start and the  button will blink blue.
- If you want to print additional images, repeat Steps 5 and 6 after printing has completed.
- After printing has completed, turn off the camera and printer, and unplug the interface cable.



 
Refer to the *Direct Print User Guide* for details on printing, including printing with direct print compatible printers.

Canon-Brand PictBridge Compliant Printers (Sold Separately)

By connecting your camera to one of the Canon-brand PictBridge compliant printers below, you can print your images without having to use a computer.



Compact Photo Printers
(SELPHY Series)



Bubble Jet Printers
(PIXMA series)

For more information, visit your nearest Canon retailer.

Shooting Movies

The camera can automatically make all settings so that you can shoot movies just by pressing the shutter button.





1 Set the mode.

 
- Set the mode dial to .





2 Set the mode.


- Turn the  dial to set the mode to .

Shooting Time




3 Compose the shot of your subject.

- Moving the zoom lever towards  will zoom in on your subject making it appear larger. Moving the lever towards  will zoom out from your subject making it appear smaller.

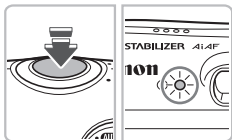

4 Focus.

 
- Press the shutter button halfway to focus.
- ▶ When the camera focuses, it will beep twice and the indicator will light green.



Elapsed Time



 Microphone



5 Shoot.

- Press the shutter button fully.
- ▶ The camera will start shooting the movie, and [● Rec.] and the elapsed time will appear on the screen.
- Once shooting begins, take your finger off the shutter button.
- If you change the composition of your shot during shooting, the focus will stay the same, but the brightness, and tone will automatically adjust.
- Do not touch the microphone while shooting.
- Do not press any buttons other than the shutter button. The sound that buttons make will be recorded in the movie.

6 Stop shooting.

- Press the shutter button fully again. The camera will beep once and stop shooting the movie.
- ▶ The indicator will blink green, and the movie will record to the memory card.
- ▶ Shooting will automatically stop when the memory card fills.


Estimated Shooting Times

Memory Card	32 MB (Supplied)	2 GB	8 GB
Shooting Time	22 sec.	23 min. 49 sec.	1 hr. 35 min. 11 sec.

- Shooting times are based on a camera at default settings.
- Shooting time can be checked on the screen in Step 2.
- Max. clip length is approx. 1 hour.
Recording also stops when the file size reaches 4 GB.

Viewing Movies

 You can view the movies you have shot on the screen.



1 Set the playback mode.

- Press the button.
- ▶ The last movie you shot will appear.
- ▶ appears on movies.



2 Select a movie.

- Press the buttons or turn the dial to select a movie, then press the button.
- ▶ The movie control panel will appear on the screen.



3 Play the movie.

- Press the buttons or turn the dial to select , then press the button.
- ▶ The movie will play.
- You can pause/resume the movie by pressing the button again.
- Press the buttons to adjust the volume.



When watching a movie on a computer, frames may drop, it may not play smoothly, and the audio may stop suddenly depending on the computer's capabilities.



For more information on the movie control panel, refer to p. 101.

Downloading Images to a Computer

You can use the included software to download the images you have taken to a computer.

Items to Prepare

- Camera and computer
- Canon Digital Camera Solution Disk supplied with the camera (p. 2)
- Interface cable supplied with the camera (p. 2)

System Requirements

Windows

OS	Windows Vista (including Service Pack 1) Windows XP Service Pack 2	
Computer model	The above OS should be pre-installed on computers with built-in USB ports.	
CPU	Viewing images	Windows Vista: Pentium 1.3 GHz or higher Windows XP: Pentium 500 MHz or higher
	Viewing movies	Core2 Duo 1.66 GHz or higher
RAM	Viewing images	Windows Vista: 512 MB or more Windows XP: 256 MB or more
	Viewing movies	1 GB or more
Interface	USB	
Free Hard Disk Space	Canon Utilities	ZoomBrowser EX: 200 MB or more PhotoStitch: 40 MB or more
Display	1,024 x 768 pixels/High Color (16 bit) or better	

Macintosh

OS	Mac OS X (v10.4 – v10.5)	
Computer model	The above OS should be pre-installed on computers with built-in USB ports.	
CPU	Viewing images	PowerPC G4/G5 or Intel Processor
	Viewing movies	Core Duo 1.66 GHz or higher
RAM	Viewing images	Mac OS X (v10.5): 512 MB or more Mac OS X (v10.4): 256 MB or more
	Viewing movies	1 GB or more
Interface	USB	
Free Hard Disk Space	Canon Utilities	ImageBrowser: 300 MB or more PhotoStitch: 50 MB or more
Display	1,024 x 768 pixels/32,000 Colors or better	

Preparations

Windows XP and Mac OS X (v10.4) are used for these explanations.

1 Install the software.

Windows



- 1 Place the Canon Digital Camera Solution Disk in the computer's CD-ROM drive.

- 2 Click [Easy Installation].

- Follow the onscreen instructions to proceed with the installation.




- 3 When the install finishes, click [Restart] or [Finish].


- 4 Remove the CD-ROM.

- Remove the CD-ROM when your normal desktop screen appears.

Macintosh



- Place the Canon Digital Camera Solution Disk in the computer's CD-ROM drive.
- The installer panel appears when you double-click the  icon in the CD-ROM window.
- Click [Install], and follow the onscreen instructions to proceed with the installation.

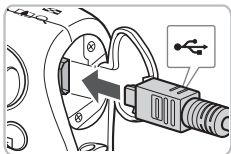


2 Connect the camera to the computer.

- Make sure the camera is turned off before connecting.
- Open the cover, and insert the small end of the plug firmly into the camera terminal in the direction as shown.
- Insert the cable's larger plug into the computer's USB port. For connection details, refer to the user guide provided with the computer.

3 Establish a connection between the camera and computer.

- Press the button and turn on the camera.

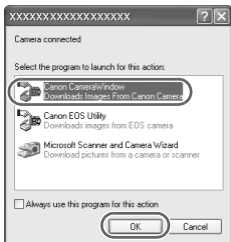

4 Open CameraWindow.


Windows

- Select [Canon CameraWindow] and click [OK].
- ▶ CameraWindow will appear.
- If CameraWindow does not appear, click the [Start] menu and select [All Programs] or [Programs], followed by [Canon Utilities] ▶ [CameraWindow] ▶ [CameraWindow] ▶ [CameraWindow].
- ▶ The Direct Transfer menu appears on the camera's screen, and the button will light blue.






Macintosh

- ▶ CameraWindow will appear when you establish a connection between the camera and computer.
- If CameraWindow does not appear, click the [CameraWindow] icon on the Dock (the bar which appears at the bottom of the desktop).
- ▶ The Direct Transfer menu appears on the camera's screen, and the  button will light blue.



You cannot shoot while the Direct Transfer menu displays.

Downloading Images with a Computer

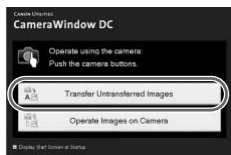


- Click [Transfer Untransferred Images].
- ▶ All images not previously downloaded will be downloaded to the computer.
- After the download finishes, turn off the camera and unplug the cable.
- For further operations, refer to the *Software Starter Guide*.

Downloading Images with the Camera




1 Select [New Images].

- Press the ▲▼ buttons or turn the  dial to select [New Images].
- If the screen on the left is not showing, press the MENU button.



2 Download images.

- Press the  button.
- ▶ All images that have not already been transferred to the computer are transferred.
- After transferring finishes, turn off the camera and unplug the cable.
- For further operations, refer to the *Software Starter Guide*.




Downloaded images will be sorted by date and saved in separate folders in the "My Pictures" folder for Windows or the "Picture" folder for Macintosh.

Accessories

Supplied with Camera



Wrist Strap
WS-DC7

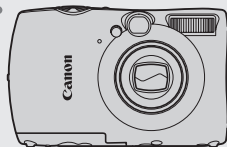


Interface Cable
IFC-400PCU*1



AV Cable
AVC-DC400*1



 Battery Pack NB-5L*1
(with Terminal Cover)



Battery Charger
CB-2LX/CB-2LXE*1



Memory Card
(32 MB)

 


Canon Digital Camera
Solution Disk

AC Adapter Kit ACK-DC30



DC Coupler
DR-30




Compact Power Adapter
CA-DC10



Power Cord

*1 Also available for purchase separately.

*2 See the user guide supplied with the printer for more information on the printer and interface cables.

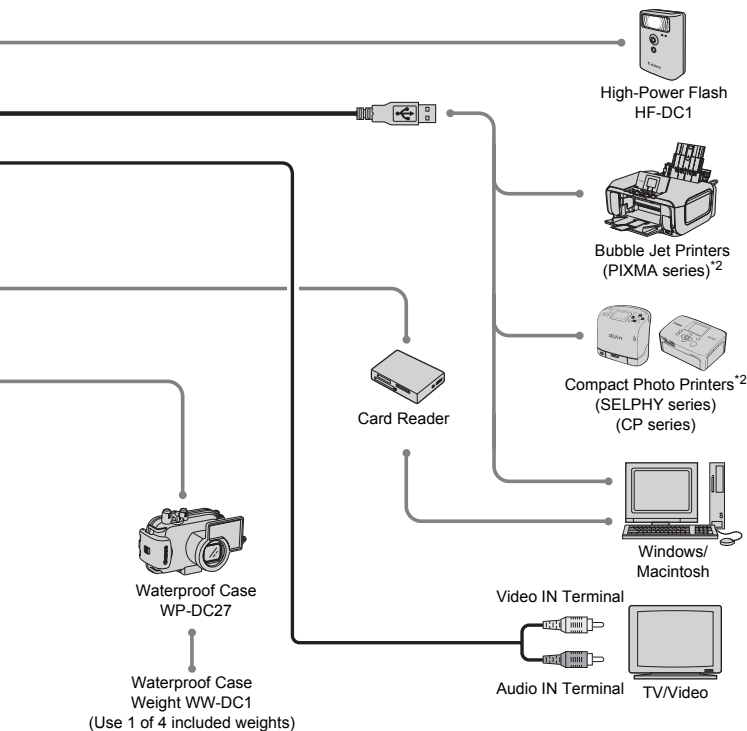

Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.

Separately Sold Accessories

The following camera accessories are sold separately. Some accessories are not sold in some regions, or may no longer be available.

Power Supplies

- **AC Adapter Kit ACK-DC30**

This kit lets you power the camera using household power. Recommended for powering the camera for an extended period of time or when connecting to a computer. Cannot be used to charge the battery inside the camera.

- **Battery Charger CB-2LX/CB-2LXE**

An adapter for charging Battery Pack NB-5L.

- **Battery Pack NB-5L**

Rechargeable lithium-ion battery.

Other Accessories

- **Waterproof Case WP-DC27**

Installing the camera into this waterproof case lets you take underwater shots at depths down to 40 meters (130 feet), or take worry-free pictures in the rain, at the beach, or on the ski slopes.

- **High-Power Flash HF-DC1**

This attachable supplementary flash can illuminate subjects that are too distant for the light from the built-in flash to reach.


2

Learning More

This chapter explains the parts of the camera and what displays on the screen, as well as, basic operations.


Conventions Used in this Guide

- Icons are used in the text to represent the camera buttons and dials.
- Language that displays on the screen appears inside [].
- The directional buttons, control dial, and FUNC./SET button are represented by the following icons.

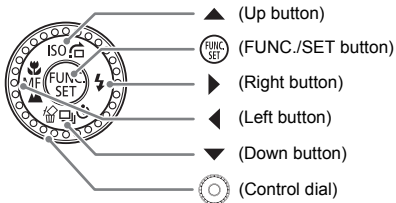

- : Troubleshooting tips.
- : Hints for getting more out of your camera.
- : Things you should be careful about.
- : Supplemental information.
- (p. xx): Reference pages. “xx” stands for page number.
- This chapter assumes all functions are at their default settings.

Components Guide

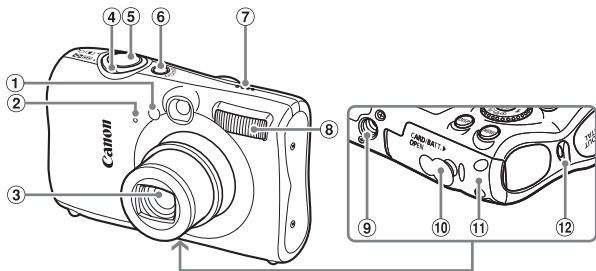

- ① Lamp (AF Assist Beam (p. 143) / Red-Eye Reduction Lamp (p. 142) / Self-Timer Lamp (p. 62))
- ② Microphone (p. 29)
- ③ Lens
- ④ Zoom Lever
Shooting: (Telephoto) / (Wide Angle) (p. 21)
Playback: (Magnify) / (Index) (p. 104)
- ⑤ Shutter Button (p. 20)
- ⑥ Power Button
- ⑦ Speaker
- ⑧ Flash (pp. 57, 67)
- ⑨ Tripod Socket
- ⑩ DC Coupler Terminal Cover (p. 150)
- ⑪ Memory Card / Battery Cover (p. 14)
- ⑫ Strap Mount (p. 11)

Mode Dial

Use the mode dial to change shooting modes.

Auto Mode

You can shoot, leaving it to the camera to make settings automatically (p. 21).

Program AE/Manual Mode

You can shoot in various different ways, using all of the camera's settings (pp. 65, 81).

Quick Shot

 
You can take pictures using the viewfinder without missing a single shot (p. 79).


Special Scene Mode

The camera can automatically make all settings appropriate for the scene so that you can take images just by pressing the shutter button (p. 54).

Movie Mode

For shooting movies (pp. 28, 97).



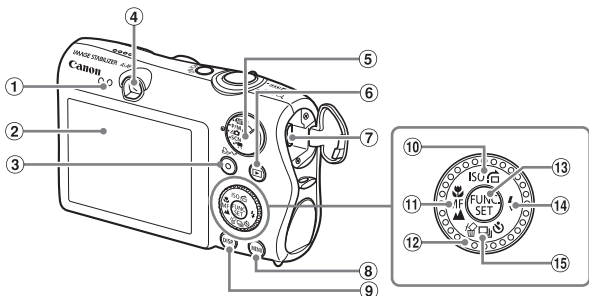

- ① Indicators (p. 44)
- ② Screen (LCD Monitor) (p. 42)
- ③ (Print/Share) Button (pp. 26, 145)
- ④ Viewfinder (pp. 76, 79)
- ⑤ Mode Dial
- ⑥ (Playback) Button (pp. 24, 146)
- ⑦ A/V OUT (Audio/Video Output) and DIGITAL Terminal
- ⑧ MENU Button (p. 46)
- ⑨ DISP. (Display) Button (pp. 42, 43)
- ⑩ ISO Speed (p. 70) / (Jump) (p. 105) / Button
- ⑪ (Macro) (p. 63) / (Infinity) (p. 67) / MF (Manual Focus) (p. 85) / Button
- ⑫ Control Dial
- ⑬ FUNC./SET (Function/Set) Button (p. 45)
- ⑭ (Flash) (pp. 57, 67) / Button
- ⑮ (Continuous Shooting) (p. 72) / (Self-Timer) (pp. 61, 62) / (1 Delete Image) (p. 25) / Button

Control Dial

When appears on the screen, you can select modes by turning the control dial.




Disappears after a few seconds




Even when doesn't appear, the dial will work in the same way as the directional keys (p. 39).

Information Displayed on the Screen

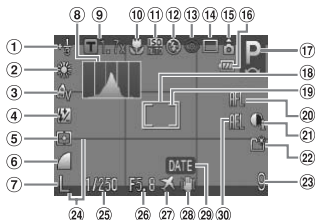Shooting (Information Display)



- | | | |
|---|---|---|
| ① Exposure Compensation (p. 72) | ⑩ Macro (p. 63) / Infinity (p. 67) / Manual Focus (p. 85) | ⑳ AF Lock (p. 84) |
| ② White Balance (p. 71) | ⑪ ISO Speed (p. 70) | ㉑ i-Contrast (p. 91) |
| ③ My Colors (p. 73) | ⑫ Flash Mode (pp. 57, 67) | ㉒ Create Folder (p. 140) |
| ④ Flash Exposure Compensation / Flash Output (pp. 88, 90) | ⑬ Red-Eye Correction (p. 92) | ㉓ Recordable Shots (Stills) (p. 16) / Remaining Time (Movies) (p. 29) |
| ⑤ Metering Modes (p. 87) | ⑭ Drive Mode (pp. 61, 62, 72, 75) | ㉔ Disp. Overlay (p. 144) |
| ⑥ Image Quality (Compression) (p. 68) | ⑮ Camera Orientation* | ㉕ Shutter Speed (p. 89) |
| ⑦ Recording Pixels (p. 68) | ⑯ Battery Charge Indicator (p. 13) | ㉖ Aperture Value (p. 89) |
| ⑧ Histogram (p. 44) | ⑰ Shooting Mode | ㉗ Time Zone (p. 139) |
| ⑨ Digital Zoom Magnification (p. 58) / Digital Tele-Converter (p. 59) | ⑱ AF Frame (p. 22) | ㉘ Image Stabilizer (p. 145) |
| | ⑲ Spot AE Point Frame (p. 87) | ㉙ Date Taken/Recorded (p. 60) |
| | | ㉚ AE Lock (pp. 87, 99) / FE Lock (p. 88) |

*  : Standard,  : Right side down,  : Left side down

When shooting, the camera detects if it is held vertically or horizontally, and adjusts settings accordingly for the best shot. It also detects orientation during playback, so you can hold the camera in either orientation and it will automatically rotate images for correct viewing.

This function may not operate correctly when the camera is pointed straight up or down.

Switching the Display

You can change the display using the **DISP.** button.



Display Off




No Information Display



Information Display




Playback (Detailed Information Display)

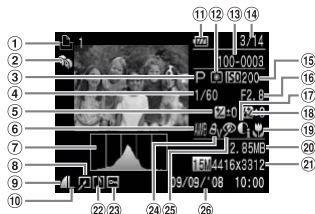

- | | | |
|--|---|--|
| ① Print List (p. 131) | ⑪ Battery Charge Indicator (p. 13) | ⑲ Macro / Infinity / Manual Focus (pp. 63, 67, 85) |
| ② My Category (p. 119) | ⑫ Metering Modes (p. 87) | ⑳ File Size (pp. 68, 98) |
| ③ Shooting Mode | ⑬ Folder Number – File Number (p. 140) | ㉑ Recording Pixels (p. 68) / Elapsed Time (Movies) (p. 99) |
| ④ Shutter Speed (p. 89) | ⑭ Displayed image number / Total number of images | ㉒ Sound Memo (p. 127) |
| ⑤ Exposure Compensation (p. 72) | ⑮ ISO Speed (p. 70) | ㉓ Protect (p. 117) |
| ⑥ White Balance (p. 71) | ⑯ Aperture Value (p. 89) / Image Quality (Movies) (p. 98) | ㉔ My Colors (p. 73) |
| ⑦ Histogram (p. 44) | ⑰ i-Contrast (p. 124) | ㉕ Red-Eye Correction (p. 125) |
| ⑧ Image Editing (pp. 120 – 126) | ⑱ Flash Exposure Compensation/Flash Output (pp. 88, 90) | ㉖ Shooting Date and Time (p. 60) |
| ⑨ Image Quality (Compression) (p. 68) / MOV (Movies) (p. 98) | | |
| ⑩ Recording Pixels (p. 68) | | |

Switching the Display

You can change the display using the **DISP.** button.

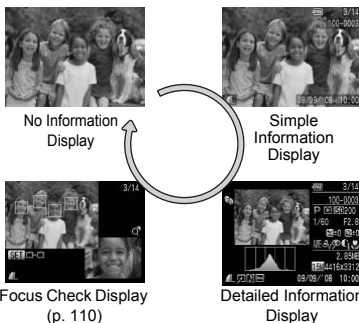


Display for Shooting in Dark Conditions during Shooting

The display automatically brightens when shooting in dark conditions, allowing you to check the composition (Night Display function). However, the brightness of the image on the screen, and the brightness of the actual image recorded may be different. Noise may appear and the movement of the subject on the screen may appear somewhat jagged. This has no effect on the recorded image.

Overexposure Warning during Playback

In “Detailed Information Display” (p. 43), overexposed areas of the image flash on the screen.

Histogram

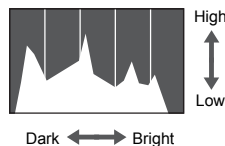

- The graph that appears in “Detailed Information Display” (p. 43), and “Shoot While Checking the Histogram” (p. 77) is called the histogram. The histogram shows the distribution and amount of brightness of an image. When the graph approaches the right side, the image is bright, but when it approaches the left side, the image is dark, and in this way you can check the exposure.

Indicators

The indicators on the back of the camera (p. 41) will light or blink under the following conditions.

Colors	Status	Operation Status
Green	Lights	Shooting preparation complete (p. 21) / Display Off (p. 138)
	Blinks	Recording/reading/transmitting image data (p. 21)
Orange	Lights	Shooting preparation complete (flash on) (p. 21)
	Blinks	Camera shake warning (p. 57)
Yellow	Lights	🌸 (p. 63)/▲ (p. 67)/AFL (p. 84)/MF (p. 85)
	Blinks	Focusing difficulty (p. 23)



When the indicator blinks green, data is being recorded to/read from the memory card or various information is being transmitted. Do not turn off the power, open the memory card slot/battery cover, shake or jolt the camera. These actions may corrupt the image data, or cause the camera or memory card to malfunction.

Commonly used shooting functions can be set with the FUNC. menu. The menu and menu items differ depending on the Shooting mode (p. 156).



1 Press the button.



- ▶ The FUNC. menu will appear.







Menu Items

Selectable Options

2 Select a menu item.

- ▶ Press the   buttons to select a menu item.

3 Select an option.

- Press the   buttons or turn the  dial to select an option.
- For options that display , settings can also be made by pressing the **DISP.** button.

 


4 Press the button.

- ▶ The setting will be made and you will return to the standard shooting screen.
- ▶ The setting you made will be displayed on the screen.

MENU MENU – Basic Operations

Various functions can be set from the menus. The menu items are organized under tabs, such as for shooting (📷) and playback (▶). The menu items differ depending on the mode (pp. 158 – 161).



1 Press the MENU button.





2 Select a tab.

- Press the ◀▶ buttons, or move the zoom lever (p. 40) left or right to select a tab (category).



3 Select a menu item.

- Press the ▲▼ buttons or turn the  dial to select a menu item.
- Some settings can only be set after switching the screen using the  button.



4 Select an option.

- Press the ◀▶ buttons to select an option.

5 Press the MENU button.

- The setting will be made and you will return to the standard shooting screen.



 
Changing the Sound Settings

You can silence the sounds of the camera buttons or adjust the volume of the camera sounds.


Muting Sounds




- Press the **MENU** button and select the **FF** tab, then select [Mute] and use the **◀▶** buttons to select [On].



Adjusting the Volume

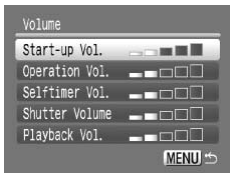

 
- Press the **MENU** button and select the **FF** tab, then select [Volume] and press the **FUNC SET** button.
- Press the **▲▼** buttons to select an item, then use the **◀▶** buttons or turn the **◉** dial to adjust the volume.




Changing the Screen Brightness

The screen brightness can be changed in two ways.


With the Menu

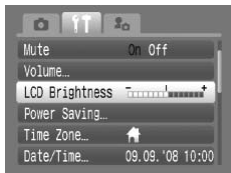

 - Press the **MENU** button, select the **☺☺** tab, select [LCD Brightness] and then press the **FUNC SET** button.
- Press the **◀▶** buttons or turn the **⦿** dial to change the brightness.
- Press the **MENU** button again to complete the setting.



With the DISP. Button

 


- Press the **DISP.** button for more than one second.
- ▶ The screen increases to maximum brightness regardless of the setting in the **☺☺** tab.
- Pressing the **DISP.** button again for more than one second will return the screen to its previous setting.



- The next time you turn on the camera, the screen will be at the brightness setting selected in the **☺☺** tab.
- You cannot change the brightness of the screen even if you press the **DISP.** button if you have already set the brightness to its highest setting in the **☺☺** tab.


Returning the Camera to Default Settings

When you have mistakenly made a setting, you can reset the camera to the default settings.

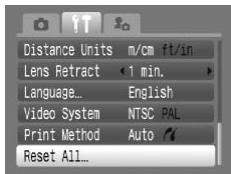

1 Select [Reset All].

 - Press the **MENU** button and select the **VERTICAL DOUBLE ARROW** tab, then select [Reset All] and press the **FUNC SET** button.



2 Reset the settings.

- Press the **LEFT/RIGHT** buttons or turn the **ROTARY** dial to select [OK], then press the **FUNC SET** button.
- ▶ The camera will reset to the default settings.




Are there functions that cannot be reset?



- The [Date/Time] (p. 17) in the **VERTICAL DOUBLE ARROW** tab, [Language] (p. 19), [Video System] (p. 112), [Time Zone] (p. 139).
- The sounds or images registered to the **PERSON** tab (p. 147).
- The saved data for custom white balance (p. 71).
- Colors that were selected in Color Accent (p. 93) or Color Swap (p. 94).



Formatting Memory Cards

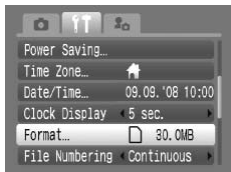You should use this camera to format a new memory card, or a memory card that has been used with other devices, before using it. Formatting (initializing) a memory card erases all data on the memory card. As you cannot retrieve the erased data, exercise adequate caution before formatting the memory card.







 1 Select [Format].

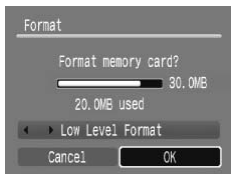- Press the **MENU** button and select the  tab, then select [Format] and press the  button.




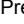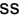






 

 

2 Format the memory card.

- Press the   buttons or turn the  dial to select [OK], then press the  button.
- ▶ The memory card will be formatted.
- ▶ When formatting has finished, the screen will return to the menu display.

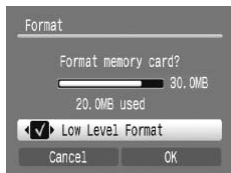Low Level Format

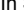Perform low level formatting when you think that the recording/reading speed of a memory card has dropped.

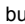


- In Step 2 above, use the   buttons to select [Low Level Format], then use the   buttons or turn the  dial to display .
- Press the     buttons to select [OK], then press the  button.
- ▶ Low level formatting starts.

About formatting

- The supplied memory card has already been formatted.
- When the [Memory card error] message appears, or when the camera does not work correctly, formatting the memory card may solve the problem. Copy the images from the memory card to a computer or other device before formatting.



- Formatting or erasing data on a memory card merely changes the file management information on the card and does not ensure its contents are completely deleted. Be careful when transferring or disposing of a memory card. When disposing of a memory card, take precautions such as physically destroying the card to prevent personal information leaks.
- When audio (p. 135) is recorded to the memory card,  will display in the right hand corner of the screen in Step 2. Formatting the card will delete audio as well.



- The total capacity of the memory card displayed in the formatting screen may be less than indicated on the memory card.
- Low level formatting may take longer than standard formatting, since all recorded data are erased.
- You can stop a low level format of a memory card by selecting [Stop]. You can still use a memory card without problem when formatting is halted, but its data will be erased.

Power Saving Function (Auto Power Down)

To save battery power, the camera shuts down automatically when it is not operated for a certain time.

Power Saving during Shooting

About 1 minute after the camera is not operated, the monitor will turn off. After about 3 more minutes, the lens will retract and the power turns off. When the monitor has turned off but the lens has not retracted yet, pressing the shutter button halfway (p. 20) turns on the monitor and shooting can be continued.

Power Saving during Playback



About 5 minutes after the camera is not operated, the monitor shuts down and the power turns off.




- You can adjust the time before the monitor turns off (p. 138).
- You can turn off the Power Saving Function (p. 138).

Changing the Image Display Time

Images display for approximately 2 seconds after being shot. You can change the length of time the images display.

 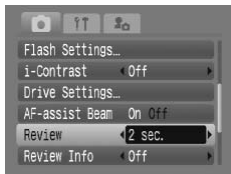




Select [Review].

- Press the **MENU** button and select the  tab, then use the **◀▶** buttons to select the display time.
- In the playback mode (p. 24) press the shutter button halfway, and when the camera changes to shooting mode, press the **MENU** button.

Clock Functions


You can check the current time.




- Press the  button until the clock screen on the left appears.
- ▶ The current time will display for approximately five seconds.
- If you change the camera's orientation, press the **◀▶** buttons or turn the  dial, you can change the color displayed.
- Push the  button to cancel the clock display.



Changing the display time

Press the **MENU** button, select the  tab, and then select the [Clock Display] menu item. Use the **◀▶** buttons to select a time.





Press and hold the  button, then press the power button to display the clock.

3

Shooting Special Scenes and Using Common Functions


This chapter explains how to shoot different scenes using the mode dial, as well as how to use other common functions, such as the flash and the self-timer.

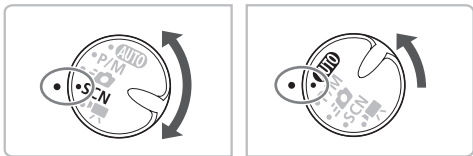

- When you select a mode in **SCN** mode that matches the scene you want to take, the camera will automatically make any necessary settings. Afterwards, you only need to press the shutter button to take the best shots for the scene.
- This chapter assumes that the mode dial is set to **SCN** or that **AUTO** mode is set.
- “**SCN** Shooting Various Scenes” (pp. 54 – 56) and “ Zooming In on Close Subjects (Digital Macro)” (p. 64) can only be used in **SCN** mode.

SCN Shooting Various Scenes

The camera will make the necessary settings for the scene you wish to shoot when you select a matching mode.

- 1 Set the mode dial to **SCN** (p. 40).
- 2 Turn the  dial to the desired mode.
- 3 Shoot.



Take portraits (Portrait)

- Produces a soft effect when photographing people.



Take snapshots at night (Night Snapshot)

- Lets you take beautiful snapshots of people against city nightscapes or night backgrounds.
- If you hold the camera firmly, you can take pictures with reduced camera shake, even without a tripod.



Take shots of kids and pets (Kids&Pets)

- Lets you capture subjects that move around, such as children and pets, without missing photo opportunities.



Take indoor shots (Indoor)

- Lets you shoot indoors with natural colors.



Shoot sunsets (Sunset)

- Lets you take shots of sunsets in vivid colors.



Take shots of foliage (Foliage)

- Lets you shoot trees and leaves such as new growth, autumn leaves or blossoms in vivid colors.



Take shots of people and snow (Snow)




- Lets you take shots of properly lit people against snowy backgrounds with natural colors.



Take shots of people at the beach (Beach)

- Lets you take shots of properly lit people near water or sand where reflected sunlight is strong.



In ,  or , images may appear rough because the ISO speed (p. 70) is increased to match the shooting conditions.



Take shots of fireworks (Fireworks)

- Lets you take shots of fireworks in vivid colors.



Take shots of aquatic life in an aquarium (Aquarium)

- Lets you shoot aquatic life in indoor aquariums with natural colors.



Shoot underwater (Underwater)

 
 
 

- Let's you shoot underwater with Waterproof Case WP-DC27 (sold separately).



Shoot using high ISO speed (ISO3200)

- Sets the ISO speed to 3200, and lets you shoot without camera shake or subject blurring even in low light conditions.
- Recording pixels are set to **M3** (1600 x 1200 pixels) (p. 68).



- In , attach the camera to a tripod so that the camera does not move and blur the image. Additionally, you are recommended to set [IS Mode] to [Off] (p. 145).
- In  or , images may appear rough because the ISO speed (p. 70) is increased to match the shooting conditions.
- In , images may appear rough.

Turning the Flash Off


 

 

You can turn the flash off when shooting.



1 Press the ► button.




2 Select .

 
 
- Press the ◀▶ buttons or turn the  dial to select , then press the  button.
- ▶ Once set,  will appear on the screen.
- After shooting, the camera will return to .



? What if the indicator blinks orange and a flashing  appears?


When you press the shutter button halfway in low light conditions where camera shake is likely, the indicator will blink orange and a flashing  will appear on the screen. Attach the camera to a tripod so that the camera does not move.




Cannot be set when the shooting mode is set to  or  (p. 56).

Zooming in More Closely on Subjects (Digital Zoom)

 You can use the digital zoom to zoom up to a maximum of 15x and capture subjects that are too far away for the optical zoom (p. 21) to enlarge. The images may appear rough, however, depending on the recording pixel setting (p. 68) and the zoom factor used.



1 Move the zoom lever toward .

 - Hold the lever until zooming stops.
- ▶ If you release the zoom lever, the largest possible zoom factor without image deterioration, and  will appear.





2 Move it toward again.

- ▶ The subject will enlarge even more with the digital zoom, and the zoom factor will appear in blue.

Zones Where Images Deteriorate

Recording Pixels	Optical Zoom	Digital Zoom
L	3.7x →	
M1	3.7x →	4.7x →
M2	3.7x →	6.3x →
M3	3.7x →	10x →
S	3.7x →	15x →

 : No image deterioration (zoom factor appears white)


 : Image deterioration (zoom factor appears blue)

When the zoom temporarily stops

If you keep holding the zoom lever, the zoom will temporarily stop at the point where the zoom factor is at its maximum without image deterioration. In **L** this is at 3.7x, in **M1** at 4.7x, in **M2** at 6.3x, and in **M3** at 10x, but in **S** it will zoom up to 15x without pausing.


Turning off the digital zoom




To turn off the digital zoom, press the **MENU** button, select the  tab, and then select the [Digital Zoom] menu item and [Off] option.


 The focal length when using digital zoom is 36 – 532 mm (35mm film equivalent).

T Digital Tele-Converter

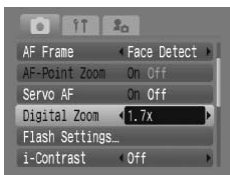The focal length of the lens can be increased by an equivalent of 1.7x and 2.2x. This enables a faster shutter speed and less chance of camera shake than just using zoom (including digital zoom) at the same zoom factor. The images may appear rough, however, depending on the combination of recording pixel (p. 68) and digital tele-converter settings used.




- Press the **MENU** button and select the  tab, then select [Digital Zoom] and use the   buttons to select [1.7x] or [2.2x].
- Pressing the **MENU** button will return you to the shooting screen.
- ▶ The view will be enlarged, **T** and the zoom factor will display on the screen.
- To return to standard digital zoom, select [Standard] in [Digital Zoom].

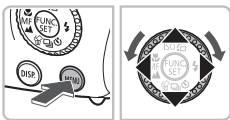

Combinations that Cause Image Deterioration


- Using [1.7x] at a recording pixel setting of **L** or **M1** will cause image deterioration (**T** and the zoom factor will display in blue).
- Using [2.2x] at a recording pixel setting of **L**, **M1** or **M2** will cause image deterioration (**T** and the zoom factor will display in blue).

 The respective focal lengths when using [1.7x] and [2.2x] are 61.2 – 226.1 mm and 79.2 – 292.6 mm (35mm film equivalent).


 

- The digital tele-converter cannot be used together with the digital zoom.


Inserting the Date and Time

You can insert the date and time an image was shot in the lower right corner. Once inserted, however, they cannot be deleted. Be sure to check beforehand that the date and time are correctly set (p. 17).

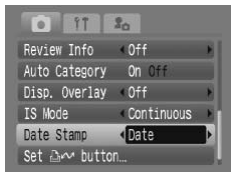

1 Select [Date Stamp].

 - Press the **MENU** button and select the  tab, then select [Date Stamp] and use the   buttons to select [Date] or [Date & Time].
- Press the **MENU** button again to make the setting.
- ▶ [DATE] will appear on the screen.
- If [DATE] does not appear, press the **DISP.** button, and set the screen display to “Information Display” (p. 42).



2 Shoot.

- ▶ You can insert the date and time an image was shot in the lower right corner.
- When returning to the original setting, select [Off] in Step 1.



Inserting and printing the date and time in images which do not have an embedded date and time

- **Use the DPOF print settings (p. 132) to print.**
- **Use the included software to print.**
Refer to the *Software Starter Guide* for details.
- **Connect the camera to a printer to print.**
Refer to the *Direct Print User Guide* for details.

Using the Self-Timer





When the person shooting wishes to join in a group photo, the self-timer can be used to shoot. Approximately 10 seconds after the shutter button is pressed, the camera will take the photo.

 


1 Press the ▼ button.




 
2 Select .

- Press the ▲▼ buttons or turn the  dial to select , then press the  button.
- ▶ Once set,  will appear.



3 Shoot.

- Press the shutter button halfway to focus on the subject, then press fully.
- ▶ When the self-timer starts, the lamp blinks and the self-timer sound plays.
- ▶ Two seconds before the shutter releases, the lamp and sound speed up (the lamp remains lit when the flash will fire).
- To return to the original setting, select  in Step 2.




You can change the delay time and number of shots taken (p. 75).

Using the Face Self-Timer

Once you compose the shot, such as for a group photo, and press the shutter button, the camera will take three shots in a row two seconds after it detects your face (p. 82) when you enter the scene.

 


1 Select .

- Follow Step 2 on p. 61 and select .

2 Compose the scene and press the shutter button halfway.

- Make sure a green frame appears on the face of the main subject, and white frames appear on other faces.



3 Press the shutter button fully.

- ▶ The camera will enter shooting stand-by, and [Look straight at camera to start count down] will appear on the screen.
- ▶ The lamp blinks and the self-timer sound plays.



 
4 Join the subjects and look at the camera.

- ▶ When the camera detects a new face, the lamp and sound speed up (the lamp remains lit when the flash will fire), and two seconds later the shutter releases.
- ▶ The second and third shots will continue to be taken.
- To return to the original setting, select in Step 2 on p. 61.

What if a face is not detected?

Even if your face is not detected after joining the subjects, the shutter will release approximately 30 seconds later.

Changing the number of shots

For the screen in Step 1, press the **MENU** button and select [FaceSelf-Timer] in the [Drive Settings] screen, then press the  button to change the number of shots.

Shooting Close-ups (Macro)







You can shoot an object at a close distance or even shoot extreme close-ups of it. The possible shooting range is approximately 5 – 50 cm (2.0 in. – 1.6 ft.) from the end of the lens when the zoom lever is moved to the maximum wide angle, and approximately 40 – 50 cm (1.3 – 1.6 ft.) when the zoom lever is moved to the maximum telephoto side.



1 Press the  button.

 


2 Select .

- Press the  buttons or turn the  dial to select , then press the  button.
- ▶ Once set,  will appear.
- To return to the original setting, select .






Using

You are recommended to attach the camera to a tripod and shoot in , so that the camera does not move and blur the image (p. 74).



The edges of the image may darken if the flash fires.



Cannot be set when the shooting mode is set to  (p. 54),  (p. 55) or  (p. 56).

Zooming In on Close Subjects (Digital Macro)

You can zoom in on subjects and take pictures while close to them. The possible shooting range is approximately 5 – 50 cm (2.0 in. – 1.6 ft.) (when moving the zoom lever to the maximum wide angle side as on p. 63) from the end of the lens, however, you can shoot zooming in even closer to the subject using the digital zoom.

Using the digital zoom may cause images to come out rough depending on the recorded pixels (p. 68).

1 Set the mode dial to **SCN** (p. 40).



2 Turn the  dial to .

▶ The optical zoom will lock at the maximum wide angle.

3 Use the zoom lever to compose the shot.

 
▶ The camera will zoom in, and the zoom factor will appear.



Zones Where Images Deteriorate


- No image deterioration (zoom factor appears white)
- Image deterioration (zoom factor appears blue)

Using



You are recommended to attach the camera to a tripod and shoot in , so that the camera does not move and blur the image (p. 74).

4

Making Settings for the Images You Want

In this chapter you will learn how to use the various functions in **P** mode, and methods of shooting in  mode to progressively advance your shooting skills.



- It is assumed that the mode dial is set to **P/M**, and that the camera is in **P** mode.
- **P/M** is an abbreviation for Program AE, and Manual.
- In “Shooting with  (Quick Shot)” (p. 79), it is assumed that the mode dial is set to .
- Before attempting to shoot using a function explained in this chapter in modes other than **P** mode, check if the function is available in those modes (pp. 156 – 159)

P Shooting in Program AE

You can set various functions as you like for shooting.
AE stands for Auto Exposure.

1 Set the mode dial to P/M (p. 40).



2 Turn the  dial to **P**.

3 Make settings according to purpose (pp. 67 – 75).

4 Shoot.




What if shutter speed and aperture value are displayed in red?

If a correct exposure cannot be obtained when pressing the shutter button halfway, shutter speed and aperture value are shown in red. Try the following settings to obtain the correct exposure.





 
- Turn on the flash (p. 67)
- Select a higher ISO speed (p. 70)

⚡ Turning the Flash On

You can make the flash fire every time you shoot. The area that is possible to shoot with a flash when the zoom lever is moved to , and the maximum wide angle is reached is approximately 50 cm – 4.6 m (1.6 – 15 ft.), and approximately 50 cm – 2.4 m (1.6 – 7.9 ft.) when the maximum telephoto level is reached.



Select ⚡.







- After pressing the  button, press the  buttons or turn the  dial to select , then press the  button.
- ▶ Once set,  will appear.

▲ Shooting Far Away Subjects (Infinity)

You can shoot landscapes and far away subjects. The focusing range is 3 m (9.8 ft.) and greater from the camera.



Select ▲.


- After pressing the  button, press the  buttons or turn the  dial to select , then press the  button.
- ▶ Once set,  will appear.

Changing the Recording Pixels (Image Size)





You can select from six types.



1 Select the recording pixels.

- Press the  button, then select **L** in the FUNC. menu.




2 Select an option.

- Press the   buttons or turn the  dial to select an option, then press the  button.
- ▶ The setting you made will be displayed on the screen.





If you select **W**, you cannot use the Digital Zoom (p. 58) or Digital Tele-Converter (p. 59).

Changing the Image Quality (Compression Ratio)





You can select from three levels of image quality. They are, in order of highest to lowest:  (Superfine),  (Fine),  (Normal).





















1 Select the image quality.

- Press the  button, then select  in the FUNC. menu.

2 Select an option.

- Press the   buttons or turn the  dial to select an option, then press the  button.
- ▶ The setting you made will be displayed on the screen.


Approximate Values for Recording Pixels and Image Quality

Recording Pixels	Image Quality	Single Image Data Size (Approx. KB)	Recordable Images/Memory Card		
			32 MB (Supplied)	2 GB	8 GB
L (Large) 15 M*/4416 x 3312		6348	4	306	1227
		3759	7	516	2063
		1797	16	1059	4234
M1 (Medium 1) 9 M/3456 x 2592		3888	7	499	1996
		2302	12	841	3364
		1100	26	1707	6822
M2 (Medium 2) 5 M/2592 x 1944		2503	11	767	3069
		1395	20	1365	5457
		695	41	2672	10679
M3 (Medium 3) 2 M/1600 x 1200		1002	29	1862	7442
		558	52	3235	12927
		278	99	6146	24562
S (Small) 0.3 M/640 x 480		249	111	6830	27291
		150	171	10245	40937
		84	270	15368	61406
W (Widescreen) 4416 x 2480		4753	5	409	1637
		2814	10	690	2759
		1345	21	1396	5581

* The values in the table are according to guidelines set by Canon. The values may change depending on the subject, memory card, and camera settings.


* The value has been rounded up to two significant figures (CIPA guideline standard).

Approximate Values for Paper Size

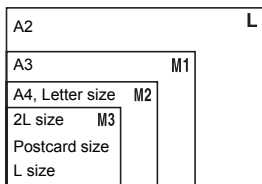



- **S** Suitable for sending images as e-mail attachments.
- **W** For printing on wide size paper.

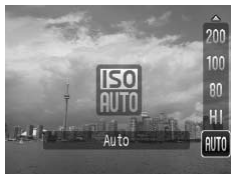








ISO Changing the ISO Speed



Select an option.

- After pressing the ▲ button, press the ▲▼ buttons or turn the  dial to select an ISO speed, then press the  button.
- ▶ Once set, the ISO speed will appear on the screen.

Approximate Values for ISO Speed




	Automatically sets the ISO speed for shooting mode and shooting conditions.	
	Automatically sets the optimal speed for the shooting mode, shooting conditions and subject or camera motion. Depending on the scene, the speed may be set higher than in ISO Auto, resulting in less subject blur and camera shake.	
  	Low	Fine weather condition, outdoor shooting.
 		Cloudy, Twilight
		High



Changing the ISO speed

- Lowering the ISO speed results in crisper images.
- Raising the ISO speed results in a faster shutter speed, reducing camera shake and letting the flash reach greater distances to the subject. The images, however, will appear rough.



- When the camera is set to  or , you can press the shutter button halfway to display the automatically set ISO speed.
- In , images may appear rough.
- With ISO3200, you can set an even faster speed (p. 56).

Adjusting the Tone (White Balance)

The white balance (WB) function adjusts the optimal white balance for natural looking colors.



1 Select the white balance.

- Press the **FUNC SET** button, then select **AWB** in the FUNC. menu.

2 Select an option.

- Press the **◀▶** buttons or turn the **○** dial to select an option, then press the **FUNC SET** button.

AWB Auto	Automatically sets the optimal white balance for the shooting conditions.
Day Light	Fine weather condition, outdoor shooting.
Cloudy	Cloudy, shady, twilight conditions
Tungsten	Tungsten, bulb-type (3-wavelength) fluorescent.
Fluorescent	Warm-white fluorescent, cool-white fluorescent, warm-white-type (3-wavelength) fluorescent.
Fluorescent H	Daylight fluorescent, daylight-type (3-wavelength) fluorescent.
Custom	Manually sets the custom white balance.

Custom White Balance

You can adjust the white balance to the light source at the shooting location and shoot with the appropriate color. Make sure that you set the white balance under the light source of the shooting scene.



- In Step 2 above, select .
- Make sure the entire screen is filled with the white subject, then press the **DISP.** button.
- ▶ The tint on the screen will change when the white balance data is set.

Adjusting the Brightness (Exposure Compensation)

You can adjust the standard exposure set by the camera in 1/3-stop increments in the range of -2 to +2.



1 Select the exposure compensation.

- Press the button, then select ± 0 .

2 Adjust the brightness.

- While watching the screen, press the buttons or turn the dial to adjust the brightness and press the button.
- After the picture has been taken, return the setting to (zero).

Continuous Shooting

You can shoot continuously (about 1.3 images/second).



1 Select the drive mode.

- After pressing the button, press the buttons or turn the dial to select , then press the button.

2 Shoot.

- ▶ As long as you hold the shutter button down, the camera will shoot successive images.





- As the number of images increases, the shooting intervals may take longer.
- If the flash fires, shooting intervals may take longer.

Changing the Tone of an Image (My Colors)




You can change the tone of an image into sepia or black and white when shooting.



1 Select My Colors.





- Press the  button, then select  in the FUNC. menu.

2 Select an option.

- Press the  buttons or turn the  dial to select an option, then press the  button.
- ▶ The setting you made will be displayed on the screen.

 My Colors Off	—
 Vivid	Emphasizes the contrast and color saturation for a vivid impression.
 Neutral	Tones down the contrast and color saturation for neutral hues.
 Sepia	Sepia tones.
 B/W	Black and white.
 Positive Film	Like the Vivid Red, Vivid Green or Vivid Blue effects, produces intense natural appearing colors like those obtained with positive film.
 Lighter Skin Tone	Makes skin tones lighter.
 Darker Skin Tone	Makes skin tones darker.
 Vivid Blue	Emphasizes blue tints. Makes the sky, ocean and other blue subjects more vivid.
 Vivid Green	Emphasizes green tints. Makes mountains, foliage and other green subjects more vivid.
 Vivid Red	Emphasizes red tints. Makes red subjects more vivid.
 Custom Color	(p. 74)



 



- In  and , white balance cannot be set (p. 71)
- In  and , colors other than people's skin color may change. You may not obtain the expected results depending on the skin color.

Custom Color

The contrast, sharpness, color saturation, red, green, blue, and skin tones in an image can be chosen and set from 5 different levels.




- Follow Step 2 on p. 73 and select , then press the **DISP.** button.
- Press the  buttons to select an option, then use the  buttons or turn the  dial to select a value.
- The more to the right, the stronger/deeper the effect gets, the more to the left, the weaker/lighter the effect gets.
- Press the **DISP.** button to make the setting.




 


Shooting Using the Two Second Self-Timer


You can set the self-timer to an approximate two second delay.

1 Display the [Drive Settings] screen.

- After pressing the  button, immediately press the **MENU** button.

2 Select .

- Press the  buttons or turn the  dial to select [Self-Timer].
- Press the  buttons to select , then press the .
- Select the  in Steps 1 and 2 on p. 61.

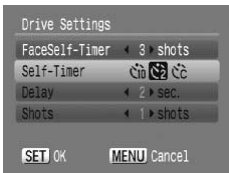

Customizing the Self-Timer


 
You can set the time delay (0 – 30 seconds) and the number of shots (1 – 10 shots).

1 Display the [Drive Settings] screen.




- After pressing the ▼ button, immediately press the MENU button.



2 Select .

- Press the ▲▼ buttons or turn the  dial to select [Self-Timer], then use the ◀▶ buttons to select .

3 Make the settings.

- Press the ▲▼ buttons, or turn the  dial to select [Delay] or [Shots].
- Press the ◀▶ buttons to select a value, then press the  button.
- Select the  in Steps 1 and 2 on p. 61.

What if the number of shots is set to more than 2 shots?

 
- Exposure and white balance settings are fixed to the first shot.
- When you set the time delay for more than 2 seconds, the self-timer lamp and sound speed up 2 seconds before the shutter releases (when the flash will fire, the lamp will light).



- If the flash fires, the shooting interval may take longer.
- If you set a high number of shots, the shooting interval may take longer.
- If the memory card becomes full, shooting stops automatically.

Shooting Using the Viewfinder

If you want to save battery power, you can use the viewfinder for shooting, instead of the screen (p. 13). Operations for shooting are the same as when using the screen.



1 Turn off the screen (p. 42).

- Press the **DISP.** button to turn off the screen.

2 Compose the scene and shoot.

- Use the viewfinder to compose the scene and shoot.



The area in the viewfinder and the area in the image taken may differ slightly.

Shooting Using a TV

You can use a TV to display the camera screen.

- Connect the camera to a TV as described in “Viewing Images on a TV” (p. 112).
- Operations for shooting are the same as when using the camera’s monitor.


Shoot While Checking the Histogram

You can shoot while checking the brightness distribution of your composition in the histogram (p. 44) (real time histogram).



1 Set the display to [Information Display] (p. 42).

2 Select [Histogram].

- Press the **MENU** button, and select [Histogram] from the  tab, and press the **◀▶** buttons to select [On].
- ▶ The histogram will appear and the brightness distribution in the composition will display in real time.



Changing the Composition to Shoot (Focus Lock)

While you press the shutter button halfway, the focus and exposure are fixed. You can now recompose and shoot. This is called Focus Lock.



1 Focus.

- Center the subject you want to shoot, and press the shutter button halfway.
- Confirm that the AF Frame on the subject is green.



2 Recompose.

 
- Hold the shutter button pressed halfway and recompose the scene.

3 Shoot.


- Press the shutter button fully.


Shooting with (Quick Shot)

Shoot using the viewfinder (p. 81). Since you can keep the focus and exposure adjusted, even without pressing the shutter button halfway, you can capture moving subjects without missing a shot.





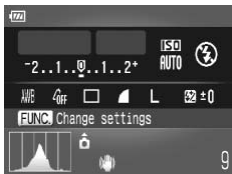


1 Set the mode.

- Set the mode dial to .
- ▶ The display will switch to the screen in Step 2.




2 Make the setting.

- After pressing the  button, press the  buttons and select a menu item.
- Turn the  dial to select an option, and press the .
- If you press the **DISP.** button, the display will turn off. If you press it again, the display will turn back on.

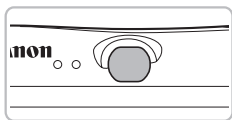

3 Adjust the focus and exposure.

 
- Make sure that the subject is within the viewfinder.
- ▶ When a person's face is detected, the focus and exposure will continue to be adjusted.
- ▶ When no faces are detected, the focus and exposure will continue to adjust on the subject toward the center of the viewfinder.



4 Shoot.

- If you have a photo opportunity, quickly press the shutter button all the way after pressing halfway.
- ▶ The image shot will display on the screen.

Estimated number of shots in

In , since the focus and exposure are constantly being adjusted, the battery will be depleted quicker than usual. Approximately 180 shots are possible while shooting in this mode.




The area in the viewfinder and the area in the image taken may differ slightly.



- If you press the shutter button halfway, the focus will lock (p. 78).
- You cannot shoot with the screen turned on.

Settings Screen

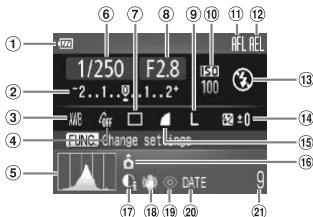

- | | | |
|------------------------------------|--|---------------------------------------|
| ① Battery Charge Indicator (p. 13) | ⑧ Aperture Value (p. 89) | ⑮ Image Quality (Compression) (p. 68) |
| ② Exposure Compensation (p. 72) | ⑨ Recording Pixels (p. 68) | ⑯ Camera Orientation (p. 42) |
| ③ White Balance (p. 71) | ⑩ ISO Speed (p. 70) | ⑰ i-Contrast (p. 91) |
| ④ My Colors (p. 73) | ⑪ AF Lock (p. 84) | ⑱ Image Stabilizer (p. 145) |
| ⑤ Histogram (p. 44) | ⑫ AE Lock (pp. 87, 99) / FE Lock (p. 88) | ⑲ Red-Eye Correction (p. 92) |
| ⑥ Shutter Speed (p. 89) | ⑬ Flash Mode (pp. 57, 67) | ⑳ Shooting Date and Time (p. 60) |
| ⑦ Drive Mode (pp. 61, 62, 72, 75) | ⑭ Flash Exposure Compensation (p. 88) | ㉑ Recordable Shots (p. 16) |




You cannot use menu items other than those that display on the settings screen, or functions that appear when you press the **MENU** button (p. 158).

5

Using Advanced Shooting Functions


This chapter serves as the advanced version of Chapter 4 and explains how to use advanced functions to capture images in exactly the way you want.



- If the mode dial is set to **P/M** then it is assumed that the camera is in **P** mode.
- “Shoot using the **M** shutter speed and the aperture value”, “Setting the flash output” (pp. 89 – 90) are explained assuming that the mode dial is set to **P/M**, and the camera is in **M** mode.
- Setting the mode dial to **SCN**, and selecting “Changing the Color and Shooting” (p. 93), “ Shooting Stitch Assist Images” (p. 96), and various other modes are explained.
- Before attempting to shoot using a function explained in this chapter in modes other than **P** mode, check if the function is available in those modes (pp. 156 – 159).

Changing the AF Frame Mode

You can change the AF (Auto Focus) frame mode to match the scene you want to shoot.

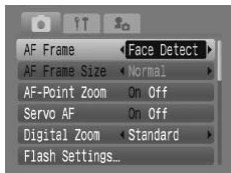

Select [AF Frame].

- Press the **MENU** button and select the tab, then select the [AF Frame], then press the **◀▶** buttons to select an option.

Face Detect

- Recognizes people's faces and focuses, adjusts exposure (evaluative metering only (p. 87)) and white balance (AWB only (p. 71)) for shooting.
- When the camera is pointed at subjects, a white frame appears on the face the camera judges to be the main subject, and gray frames (max. 2) will appear on other faces. When the shutter button is pressed halfway, up to 9 green frames will appear on faces the camera focuses on.



- If a face is not detected and only gray frames (no white frame) appear, the setting will change to [AiAF].
- Examples of faces that cannot be detected:
 - Subjects that are far away or extremely close.
 - Subjects that are dark or light.
 - Faces turned to the side or at a diagonal, or faces with a portion hidden.
- The camera may mistakenly identify non-human subjects as a face.
- If the camera cannot focus when you press the shutter button halfway, the AF frame will not appear.
- When the display is off (p. 42), settings cannot be made.

AiAF

The camera automatically selects among 9 AF frames to focus with.



- If the camera cannot focus when you press the shutter button halfway, the AF frame will not appear.

Center

The AF frame will be fixed to the center. This is effective for focusing on a specific point.



You can reduce the AF frame size

Press the **MENU** button, select the  tab, then select the [AF Frame Size] menu item and [Small] option.



If the camera cannot focus when you press the shutter button halfway, the AF frame will turn yellow.




Shooting With Magnified Focus Display

If you press the shutter button halfway using [Face Detect] or [Center] while in AF frame mode, the AF frame will magnify and check the focus.



1 Set the AF frame mode to [Face Detect] or [Center] (p. 82).

2 Select [AF-Point Zoom].

- Press the **MENU** button and select [AF-Point Zoom] on the  tab, use the   buttons to select [On].

3 Focus.

- ▶ In [Face Detect], the face selected as the main subject will appear magnified.
- ▶ In [Center], the center AF frame will appear magnified.



What if the display does not magnify?

 
When in [Face Detect] if a face cannot be detected, when a face is too big in relation to the screen (p. 82), or when in [Center] and the camera doesn't focus, the display will not appear magnified.



When using Digital Zoom (p. 58), Digital Tele-Converter (p. 59), or when connected to a TV (p. 76), the magnified display will not appear.

AFL Shooting with AF Lock

The focus can be locked. After locking the focus, even when releasing your finger from the shutter button the focal area will not change.



1 Focus.

- Keep the shutter button pressed halfway and press the ◀ button.
- The focus is locked, then AFL is displayed on the screen.
- If you release your finger from the shutter button, and press the ◀ button once more, AFL will disappear, and the focus will unlock.


2 Compose the scene and shoot.

Shooting with Servo AF

While the shutter button is pressed halfway, the focus will continue to adjust, allowing you to take pictures of moving subjects without missing a shot.


1 Set the AF frame mode to [Face Detect] or [Center] (p. 82).


2 Select [Servo AF].

- Press the MENU button and select [Servo AF] on the  tab, and use the ◀▶ buttons to select [On].

3 Focus.

- While the shutter button is pressed halfway, the focus will continue to adjust. In [Face Detect] it will focus on people's faces, in [Center] on the spot where the blue frame appears.

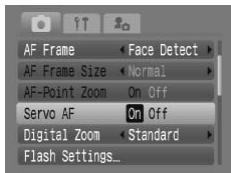

- Depending on the scene, the camera may not focus.
- You cannot shoot with the AF lock.
- You cannot set the Servo AF if you have set the [AF-Point Zoom] in the  tab to [On].


MF Manual Focus

When not using the auto focus, if you press the shutter button halfway after roughly focusing manually, you can fine tune the focus.





1 Press the ◀ button.

2 Select MF.

- Press the ◀▶ buttons, or turn the  dial, select MF and quickly press the ▲ or ▼ buttons.
- MF will appear, and the center AF frame will display magnified.



3 Focusing roughly.


- Using the bar that shows the distance display and AF point zoom as a guide, press the ▲▼ buttons, or turn the  dial while looking at the magnified display, adjust the focus roughly and press the  button.

4 Fine tuning the focus.


- If you press the shutter button halfway, you can fine tune the focus.



Changing the distance display units

Press the MENU button, and select the desired units from [Distance Units] in the  tab.



- In order to focus accurately, you are recommended to fix the camera to a tripod.
- Magnified display cannot be used with the digital zoom (p. 58), the digital tele-converter (p. 59) or when connected to a TV (p. 76), however the focus can be adjusted.
- When turning off the magnified display in the center of the screen, press the MENU button, and select [Off] from the  tab in [MF-Point Zoom].

 
Selecting the Person to Focus On (Face Select)

You can designate which face to focus on out of a group of people, and follow that face with in a certain area.


1 Register to the button (p. 145).



2 Press the button.

- ▶ You can follow the face detected as the main subject within a certain area even when it moves if a frame  appears.

 3 Select the face to focus on.

- If you press the  button, the frame will move to another face that the camera has detected.
- When the frame has made a full circuit of all detected faces, you will be returned to the AF frame mode screen.



4 Shoot.

 
- ▶ The frame around the face indicated in Step 3 will focus.

? What if doesn't appear?

If a face is not detected, a frame will not appear.



Confirming the number of detected faces

Keeping the  button pressed will display the number of faces detected by the camera (35 at the most) (green: main subject's face, white: detected face).





You cannot use the Digital Zoom (p. 58) or the Digital Tele-Converter (p. 59).

Changing the Metering Mode





You can change the metering mode (brightness measuring function) to match the scene you want to shoot.


 



1 Select the metering mode.

- Press the  button, then select  in the FUNC. menu.


2 Select an option.

- Press the   buttons or turn the  dial to select an option, then press the  button.
- ▶ The setting will be displayed on the screen.



 Evaluative	Suitable for standard shooting conditions, including back lit shots. Automatically adjusts the exposure so that the subject is always properly lit for the shooting conditions.
 Center Weighted Avg.	Averages the light metered from the entire frame, but gives greater weight to the center.
 Spot	Only meters within the [] (Spot AE Point frame) that appears at the center of the screen.

 AEL Shooting with AE Lock

When you will take several shots with the same exposure, you can set the exposure and focus separately using AE lock. AE stands for “Auto Exposure”.



1 Set the exposure.

 
- Point the camera toward the subject for which you wish to set the exposure, and while pressing the shutter button halfway, press the  button.
- ▶ When AEL appears, the exposure will be set.
- If you release your finger from the shutter button, and press the  button once more, AEL will disappear, and the AE will unlock.

2 Compose the scene and shoot.



FEL Shooting with FE Lock

Just like with AE lock (p. 87), you can lock the exposure for shooting with the flash with FE lock. FE stands for “Flash Exposure”.

1 Select (p. 67).



2 Set the exposure.

- Point the camera toward the subject for which you wish to set the exposure, and while pressing the shutter button halfway, press the  button.
- ▶ The flash will fire and when FEL appears, the exposure will be set.
- If you release your finger from the shutter button, and press the  button once more, FEL will disappear, and the FE will unlock.





3 Compose the scene and shoot.






Flash Exposure Compensation

Just like with exposure compensation (p. 72), you can adjust the exposure ± 2 stops in 1/3-stop increments when using the flash.




1 Select flash exposure compensation.

- Press the  button, then select  in the FUNC. menu.

2 Set the exposure compensation.

- Press the   buttons or turn the  dial to set the compensation level, and press the  button.
- After shooting, return the setting to  (zero).




You can also set the flash exposure compensation by pressing the **MENU** button, and selecting [Flash Settings] from the  tab, and using the   buttons.

M Setting the Shutter Speed and Aperture Value


You can set both the shutter speed and aperture value to achieve the exposure you want. **M** stands for “Manual”.

1 Set the camera to **M**.

- Set the mode dial to **P/M**, and turn the  dial to select **M**.



2 Select **Tv**/**Av**.

- Press the , and select **Tv** in the FUNC. menu.







Shutter speed

Aperture value

Correct exposure indicator

Exposure level mark

 
3 Make the setting.

- Turn the  dial to select a shutter speed (Tv), then press the   buttons to set the aperture value (Av), and press the .
- The set values will synchronize, the exposure level mark will move, and you can check how far off the exposure is from the correct level.
- If the difference from the correct level is more than ± 2 , the exposure level mark will turn red. Pressing the shutter button halfway will cause [+2] or [-2] to display in red in the upper left corner of the screen.



When attaching the camera to a tripod for taking shots with long exposure times, you are recommended to set [IS Mode] to [Off] (p. 145).



- The correct exposure is determined by the selected metering mode (p. 87).
- If you use the zoom, or change the composition after making the setting, the exposure level mark may move.
- The brightness of the screen will change depending on the shutter speed, and aperture value settings. However, the brightness of the screen will not change if the flash is set to .

Available Shutter Speeds

15", 13", 10", 8", 6", 5", 4", 3"2, 2"5, 2", 1"6, 1"3, 1", 0"8, 0"6, 0"5, 0"4, 0"3, 1/4, 1/5, 1/6, 1/8, 1/10, 1/13, 1/15, 1/20, 1/25, 1/30, 1/40, 1/50, 1/60, 1/80, 1/100, 1/125, 1/160, 1/200, 1/250, 1/320, 1/400, 1/500, 1/640, 1/800, 1/1000, 1/1250, 1/1600

- 1/160 indicates 1/160 second, 0"3 indicates 0.3 second and 2" indicates 2 seconds.
- The fastest shutter speed when using the flash is 1/500 second. The camera automatically resets the shutter speed to 1/500 second if a faster speed is selected.

Available Aperture Values

F2.8, F3.2, F3.5, F4.0, F4.5, F5.0, F5.8, F8.0, F9.0, F10, F11, F13, F14, F16

- Depending on the zoom position, some aperture values may not be available.



Setting the Flash Output

You can select 3 levels of flash output in **M** mode.

 
 


1 Set the camera to **M** (p. 89).

2 Set the camera to  (p. 67).





3 Set the flash output.

- Press the  button, and select  from the FUNC. menu.

4 Select the flash output.

  - Press the   buttons, or turn the  dial, to select the flash output, and press the  button.



You can also set the flash output by pressing the **MENU** button and selecting [Flash Settings] from the  tab. Then press the  button, select [Flash Output] and press the   buttons to make the setting.

C_i Adjusting Dark Subjects and Shooting (i-Contrast)

When people's faces, or the subject is dark, you can take shots where the dark portions are detected and automatically brightened.



Select [i-Contrast].

- Press the **MENU** button, and select [i-Contrast] from the tab, and use the buttons to select [Auto].
- ▶ **C_i** will appear on the screen.
- If **C_i** does not appear, press the **DISP.** button, and switch the screen to Information Display (p. 42).




Depending on the scene, the image may become rough, or not be adjusted correctly.





You can correct images taken (p. 124).


Red-Eye Correction

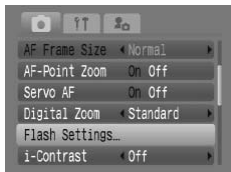You can automatically correct images taken with the flash where eyes appear red.







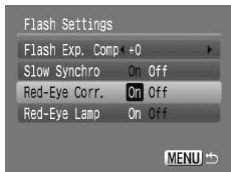


1 Select [Flash Settings].

- Press the **MENU** button, and select [Flash Settings] from the  tab and press the  button.




2 Make the setting.

- Press the   buttons or turn the  dial to select [Red-Eye Corr.] then press the   buttons to select [On].
- ▶  will appear on the screen (p. 42).
- If  does not appear, press the **DISP.** button, and switch the screen to Information Display (p. 42).



Red-eye correction may be applied to other red parts than red eyes. For example, when red make-up has been used around eyes.



- You can correct images taken (p. 125).
- If you press the  button as shown on the screen in Step 2, and then press the **MENU** button the Flash Settings screen will display.

Changing the Color and Shooting



You can change the look of an image when shooting. However, depending on the scene, the image may become rough, or the colors may not come out as expected. We recommend saving the original image as well as the new one (p. 95).

Color Accent

You can take shots where only a single chosen color from within the screen remains, and the rest of the shot changes to black and white.



1 **Select .**


- Set the mode dial to **SCN**, turn the  dial and select .

2 **Press the **DISP.** button.**




- The unchanged image, and the Color Accent image will both display.
- The color for default settings is green.



3 **Indicate the color.**

- Position the center frame so it is filled with the the color you want, and press the  button.
- ▶ The color indicated will be recorded.

4 **Indicated the area to be colored.**

- Press the   buttons or turn the , and change the area you want to color.
- When you want only the color that you have chosen to remain, increase the value of -. When you want to colors to remain that are close to the color you have chosen, increase the value of +.
- Pressing the **DISP.** button will make the setting, and will return to the shooting screen.

Recorded color




 
- Using the flash may cause the image to come out different than expected.
- Even if you turn off the power, the recorded color will be saved.

Color Swap

You can take shots changing the color of an item in the image to another color. You can only record one other color.



1 Select .

- Set the mode dial to **SCN**, turn the  dial and select .




2 Press the **DISP.** button.

- The unchanged image and the Color Swap image will both display.
- The default settings are to change the green to gray.




3 Indicate the color before changing the image.


- Position the center frame so it is filled with the color you want, and press the  button.
- ▶ The color indicated will be recorded.



4 Indicate the desired color to change the image to.

- Position the center frame so it is filled with the color you want, and press the  button.
- ▶ The color indicated will be recorded.

5 Indicate the area to be colored in the changed image.


- Press the ▲▼ buttons or turn the  dial, and you can change the area to be colored.
- When you want only the color that you have chosen to remain, increase the value of -. When you want to colors to remain that are close to the color you have chosen, increase the value of +.
- Pressing the **DISP.** button will make the setting, and will return to the shooting screen.




- Using the flash may cause the image to come out different than expected.
- Even if you turn off the power, the recorded color and area will be saved.
- Depending on the scene, the image may come out rough.

Saving the Original Image

The original image will be saved separately at the same time as the changed image.

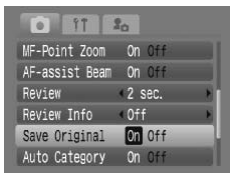

Select [Save Original].

- Press the **MENU** button and select [Save Original] on the  tab, use the ◀▶ buttons to select [On].



The changed image will display directly after shooting. If you delete the image at this time, please take extra care as the changed image will be deleted along with the original.






- Both images will be recorded with serial numbers.
- Since two images will be made with one shot, the possible shots will be about half the amount as usual.

Shooting Stitch Assist Images

Large subjects can be split into several shots that can later be merged together using the included software on a computer to create a panoramic image.



1 Select or .

- Set the mode dial to **SCN**, turn the  dial and select  or .

2 Take the first shot.


- ▶ The exposure and white balance will be set with the first shot.



3 Take the second shot.

- Overlap part of the first shot when taking the second shot.
- Minor discrepancies in the overlapping portions will be corrected when the images are merged.
- You can repeat the procedure for the second shot to take up to 26 shots.
- When you have finished taking shots, proceed to Step 4.

4 Finish shooting.

- Press the  button.



5 Merge the images with a computer.

- For details on how to merge the images, refer to the *Software Starter Guide*.



This function is not available when shooting while displaying on a television (p. 76).

6

Using Various Functions for Shooting Movies

This chapter serves as the advanced version of Chapter 1's "Shooting Movies" and "Viewing Movies" and explains how to use advanced functions to shoot and view movies.



- This chapter assumes that the mode dial is set to **M**.
- In this chapter, pictures that are taken as explained in Chapters 3 – 5, will be called still images.






Changing the Movie Mode



You can select from three modes.



- 1 Set the mode dial to .
- 2 Select a movie mode.
 - Turn the  dial to select a mode.

 Standard	Normal mode.
 Color Accent	These shooting modes let you change all colors except the designated color to black and white, or exchange the designated color for another color, when shooting. See "Changing the Color and Shooting" (p. 93) for details.
 Color Swap	



In  and , depending on the scene, the shot may not come out as planned.

Changing the Image Quality

You can select from two settings.














- 1 Select the image quality.
 - Press the  button, then select  in the FUNC. menu.
- 2 Select an option.
 - Press the   buttons or turn the  dial to select an option, then press the  button.
 - ▶ The setting you made will be displayed on the screen.

Image Quality Table

Image Quality (Recording Pixels/Frame Rate)	Content
 640 x 480 pixels, 30 frames/sec.	This setting will produce standard movies.
 320 x 240 pixels, 30 frames/sec.	Since the number of the recording pixels is smaller, the image quality will be lower than with  , but you can record three times the length.

Estimated Shooting Time

Image Quality (Frame Rate)	Shooting Time		
	32 MB (Supplied)	2 GB	8 GB
 640	22 sec.	23 min. 49 sec.	1 hr. 35 min. 11 sec.
 320	1 min. 12 sec.	1 hr. 13 min. 10 sec.	4 hrs. 52 min. 24 sec.

- Based on Canon's testing standards.
- Max. clip length is approx. 1 hour.
Recording also stops when the file size reaches 4 GB.
- Depending on the memory card, recording may stop even if the max. clip length has not been reached. Use of SD Speed Class 4 or higher memory cards is recommended.



AE Lock/Exposure Shift

In  you can set the exposure, or change it in 1/3 steps within a range of ± 2 .

 

1 Focus.



2 Set the exposure.

- Press the  button to lock the exposure, the exposure shift bar appears.
- Press the  button again to release the lock.




3 Change the exposure.







- While watching the screen, press the  buttons or turn the  dial to adjust the brightness.

4 Shoot.












Other Shooting Functions

For  mode, the following functions can be used in the same way as for still images. For  and  modes, the functions with an * attached can be used in the same way as for still images. See the referred pages for details.




 








-  **Zooming in More Closely on Subjects (Digital Zoom) (p. 58)**
You can use the digital zoom, but the optical zoom cannot be used.
If you want to shoot at the maximum magnification, you should adjust the optical zoom to the maximal factor before shooting.
The sound from the zoom will be recorded.
-  **Using the Self-Timer (p. 61)***
-  **Shooting Close-ups (Macro) (p. 63)***
-  **Shooting Far Away Subjects (Infinity) (p. 67)***
- **Adjusting the Tone (White Balance) (p. 71)**
- **Changing the Tone of an Image (My Colors) (p. 73)**
-  **Shooting Using the Two Second Self-Timer (p. 74)***
- **Shooting Using a TV (p. 76)***
Use the TV controls to adjust the sound volume.
- **AF Shooting with AF Lock (p. 84)**
- **MF Manual Focus (p. 85)***
- **Turning off the AF Assist Beam (p. 143)***
- **Displaying the Overlay (p. 144)***
[3:2 Guide] is not available.
- **Changing the IS-Mode Settings (p. 145)***
You can switch between [Continuous] and [Off].
- **Registering Functions to the  Button (p. 145)***

Playback Functions

The following functions can be used in the same way as for still images. For more information on each function, proceed to the referred pages.

- **Erasing Images (p. 25)**
-  **Search Images by Sets of 9 (Index Display) (p. 104)**
-  **Searching for Images Using the Jump Display (p. 105)**
-  **Viewing Slideshows (p. 107)**
-  **Changing Image Transitions (p. 111)**
- **Viewing Images on a TV (p. 112)**
-  **Erasing All Images (p. 113)**
-  **Protecting Images (p. 117)**
-  **Organizing Images by Category (My Category) (p. 119)**
-  **Rotating Images (p. 120)**
- **Transferring Images to a Computer (p. 128)**
-  **Designating Images for Transfer (DPOF) (p. 129)**

Summary for “Viewing Movies” (p. 30)

	Exit
	Playback
	Slow Motion Playback (you can use the  buttons to adjust the speed. Sound will not play back.)
	Display the first frame
	Previous frame (Rewind if you hold down the  button.)
	Next frame (Fast forward if you hold down the  button.)
	Display the last frame
	Edit
	Displays when connected to a PictBridge compliant printer (p. 26). Refer to the <i>Direct Print User Guide</i> for details.

Editing

You can trim the beginnings and ends of recorded movies in one-second increments.





Movie Editing Panel

 












Movie Editing Bar

1 Select .

 - Follow Step 3 on p. 30, select  and press the  button.
- ▶ The movie editing panel and the movie editing bar will display.

2 Set the editing range.

     - Press the  buttons and select  or .
- Press the  buttons or turn the  dial to move ,  will display at each one-second interval. If you select , you can trim the beginning of the movie from . If you select , you can trim the end of the movie from .

- ▶ Even if you move **⏏** to a point other than a **⏏** point, only the portion from the nearest **⏏** to the left will be trimmed when **⏏** is selected. Only the portion from the nearest **⏏** to the right will be trimmed when **⏏** is selected.
- ▶ The section in light blue designated with **⏏** will be the section of the movie that will remain after editing.

3 Check the edited movie.

- Press the **▲▼** buttons to select **▶**, then press the **FUNC SET** button. The edited movie will play.
- To edit the movie again, repeat Step 2.
- To cancel editing, press the **▲▼** buttons, and select **⏏**, then after pressing **FUNC SET** button, press the **◀▶** buttons or turn the **⦿** dial to select [OK], then press the **FUNC SET** button.



4 Save the edited movie.

- Press the **▲▼** buttons to select **⏏**, then press the **FUNC SET** button.
- Press the **◀▶** buttons or turn the **⦿** dial to select [New File], then press the **FUNC SET** button.
- ▶ The movie will be saved as a new file.

 



- When [Overwrite] in Step 4 is selected, the unedited movie is overwritten with the edited movie, erasing the original movie.
- When there is not enough space left on the memory card, only [Overwrite] can be selected.
- If the battery is depleted partway through editing, the edited movie clips may not be saved. When editing movies, you should use a fully charged battery or the separately sold AC adapter kit (sold separately) (p. 38).

7

Using Various Playback and Other Functions

The first part of this chapter explains various ways to play back and edit images. The latter part of this chapter explains how to download images to a computer, and how to specify images for printing.




It is assumed that the  button, has been pressed, and the camera is in playback mode (p. 24).



- Images that have been edited on a computer, had their file name changed, or have been taken on a different camera, may not be possible to play back or edit.
- The edit function (pp. 120 – 127) cannot be used if the memory card does not have free space available.

Search Images by Sets of 9 (Index Display)

 Displaying 9 images at a time lets you quickly find the image you want.









1 Move the zoom lever toward .

- ▶ Images will display in an index. The selected image will have a green frame and be enlarged.



2 Select an image.

- Press the     buttons or turn the  dial and select the image.
- Moving the zoom lever toward , will display the selected image.

Searching 9 Images at a Time



Jump Bar





1 Move the zoom lever toward .

- ▶ Images will display in an index.



 
2 Move the zoom lever toward again.

- ▶ The jump bar appears.

3 Press the buttons to change the displayed images.

- Press the   buttons or turn the  dial to switch between displays of 9 images.
- Moving the zoom lever toward  will return to the index display.



Holding the  button and pressing the   buttons will jump to the first or last set of images.



📁 Searching for Images Using the Jump Display

When there are many images on the memory card, you can search them by a specified method or image unit.

Select a Jump Method



- In Single Image Playback, press the ▲ button.
- Press the ▲▼ buttons and select a jump method.
- If you press the **DISP.** button, you can switch between on and off for the information display.

 Jump Shot Date	Jumps to the first image of each shooting date.
 Jump to My Category	Displays the first picture in each category (p. 119).
 Jump to Folder	Jumps to the first image of each folder.
 Jump to Movie	Jumps to a movie.
 Jump 10 Images	Jumps over 10 images at a time.
 Jump 100 Images	Jumps over 100 images at a time.

Search by 📅, 📁, 📂, and 🎞️



Target Filters

1 Select a target filter.

- Use the ◀▶ buttons to select a filter (excluding 🎞️).
- If you turn the 🔄 dial, images within the target (in 🎞️, movies only) will appear.
- Pressing the **MENU** button will return you to single image display.



2 Viewing images using filter playback.

- If you press the **FUNC SET** button, filter playback will start, ☑ and a blue frame will appear.
- If you press the **◀▶** buttons or turn the **○** dial, the target images selected in Step 1 will display.
- If you press the **▲** button, it will cancel the filter playback.

Jump by **↶** and **↷** Images



- If you press the **◀▶** buttons, you will jump to and display the image that is the selected number of images away.
- If you turn the **○** dial, you can switch images singly.
- Pressing the **MENU** button will return you to single image display.

? What if you can't select a target?

When you chose **↶** in Step 1 on p. 105, if there are no images sorted into categories, you can only select **↶**. Also, when there are only images with the same date in **☑**, and only 1 folder has been created in **📁**, you can only select 1 target.

💡 Filter playback



Even in filter playback (Step 2), you can view filtered images with “**🔍** Search Images by Sets of 9 (Index Display)” (p. 104), “**🔍** Viewing Slideshows” (p. 107), and “**🔍** Magnifying Images” (p. 111). However, if you change the category (p. 119), or edit an image and save it as a new image (p. 121), [Display all images] will display, and filter playback will cancel.

Viewing Slideshows





You can automatically playback images and movies recorded to a memory card. Each image displays for approximately 3 seconds.





 
1 Select [Slide Show].

- Press the **MENU** button and select the  tab, then select [Slide Show] and press the  button.

2 Select [Start].

- Press the  buttons or turn the  dial to select [Start], then press the  button.
- ▶ A few seconds after [Loading image...] displays, the slideshow will start.
- You can pause/restart a slideshow by pressing the  button again.
- Press the **MENU** button to stop the slideshow.




- If you press the  buttons or turn the  dial during playback the image will switch, if you press and hold down the  buttons you can fast-forward through images.
- Power saving function does not work during slideshows (p. 51).




Changing Settings

You can change the time that images are displayed, and set the slide show to repeat.

1 Select [Set up].

- Follow Step 2 above, select [Set up] and press the  button.

2 Make the setting.

- Press the  buttons and select an item, then press the  buttons, or turn the  dial and make the setting.
- Pressing the **MENU** button will return you to the slide show screen.












Selecting Images for Playback

Select the Classification

You can select images by classification, group them together and play them back.











1 Select , , or .

- Follow Step 2 on p. 107, press the     buttons or turn the  dial to select , , or  and press the  button.



2 Select a menu item.







- Press the   buttons or turn the  dial, select the items to set and press the .
- If you press the   buttons, you can make the images in the items display.
- ▶ Once set,  will appear on the screen.
- If you press the  button once more, selection will cancel.
- Playback will occur in the order the images were chosen.
- Press the **MENU** button to complete the setting.
- Follow Step 2 on p. 107 to play back images.

Single Image Selection

You can select the images you want to play one by one, sort them into custom 1 to 3 and play them back.






1 Select *1 .

- Follow Step 2 on p. 107, press the     buttons or turn the  dial to select *1 , and press the .
- At first, only *1 will display. When you set *1 , *2 will be come selectable. When you set *2 , *3 will be come selectable.




2 Select an image.


- Press the ◀▶ buttons or turn the  dial, select the image and press the  button.
- Once set, ✓ and the selected order number will appear on the screen.
- If you press the  button once more, selection will cancel.
- When selecting multiple images, repeat the operation above (maximum of 998 images).
- Playback will occur in the order the images were chosen.
- Press the **MENU** button to complete the setting.
- Follow Step 2 on p. 107 to play back images.

Select All Images


You can collect all of the images and designate them as custom 1 to 3.

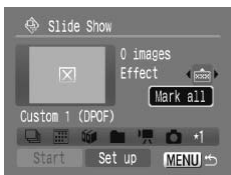

1 Select [Mark all].

- Follow Step 2 on p. 107, and after selecting *1, press the ▲▼ buttons, select [Mark all] and press the  button.

2 Select.

- Press the ▲▼ buttons, select [Mark all] and press the  button.
- Press the ◀▶ buttons, select [OK] and press the  button.
- To cancel [Mark all], select [Reset] from the above step.

Changing the Effect

You can select an effect to use when switching images.



- Press the ▲▼ buttons, and select and press the ◀▶ buttons or turn the dial to select an item.
- ▶ When you select an item, an image with the effect you selected will appear.
- will display without an effect.
- Play the images following the operations in Step 2 on p. 107.

Checking the Focus or People's Expressions (Focus Check)

The location of the AF frame when focused for a shot, or the shot of a detected face can be magnified.



1 Press the DISP. button, and switch to the focus check display (p. 43).

- ▶ A white frame will appear where you focused the AF frame upon shooting, or on a face.
- ▶ A gray frame will appear on a face detected during playback.
- ▶ The place where the orange frame appears will magnify.

2 Change the place to be magnified.

- Pressing the button will move you to a different white frame.



3 Change the magnification rate or location.







- Move the zoom lever toward Q once.
- If you press the ▲▼◀▶ buttons, the location of the display will move.
- If you move the zoom lever toward Q, the image will magnify, if you move it toward , it will reduce in size.
- Pressing the MENU button will return you to Step 2.

Q Magnifying Images



Approximate Location of Displayed Area

Move the zoom lever toward .




- The enlarged display will appear, and if you continue to hold the zoom lever the image will magnify up to a maximum factor of approximately 10x.
- If you press the     buttons, you can move the location of the displayed area.
- Move the zoom lever toward  to reduce the magnification or return to Single Image Playback.
- If you turn the  dial, you can switch images while they are still enlarged.

Changing Image Transitions

You can select from three transition effects when switching between movies or images in single image playback.



Select [Transition].

- Press the **MENU** button and select the  tab, then select [Transition] and use the   buttons to select the desired transition.
- ▶ Press the **MENU** button to make the setting.


 


Immediately switches between images without transition effect.



The next images will gradually appear.




Switches between images by sliding them left or right when the   buttons are pressed.

Viewing Images on a TV

Using the supplied AV cable, you can connect the camera to a TV to view images or movies you have shot.

Items to Prepare


- Camera and TV
- AV cable supplied with the camera (p. 2)

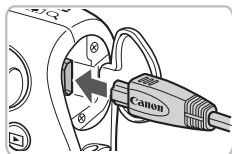

1 Turn off the camera and TV.

2 Connect the camera to the TV.

- Open the camera's terminal cover and fully insert the plug of the supplied AV cable into the camera's A/V OUT terminal.
- Insert the cable plug fully into the video input terminals as shown in the illustration.

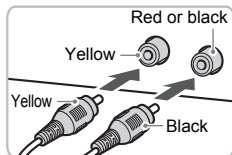

3 Turn on the TV and switch it to the input that the cable is connected to.



4 Press the camera's  button and turn on the power.

- ▶ The image will appear on the TV (nothing will appear on the monitor of the camera).
- After you finish viewing, turn off the camera and TV, and unplug the AV cable.



What if the images don't properly display on the TV?

If the camera's video output system (NTSC/PAL) does not match the TV's, images will not display correctly. Press the **MENU** button, and use the [Video System] menu item on the **↑** tab to switch to the correct video system.




Erasing All Images

You can select images or movies and erase them in groups. Since erased images or movies cannot be recovered, exercise adequate caution before erasing. However, protected images and movies (p. 117) cannot be erased.



1 Select [Erase].

- Press the **MENU** button, and select [Erase] on the tab, and press the button.

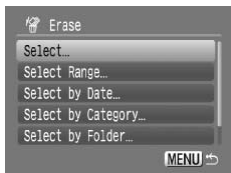

2 Select a selection method.

- Press the buttons or turn the dial, select a selection method, and press the button.
- To stop erasing and return to the menu screen, press the **MENU** button.

Designating Images Individually


1 Select [Select].

- Follow Step 2 above to select [Select] and press the button.





2 Select images.

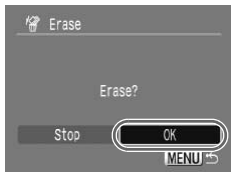- Press the buttons or turn the dial, select the image and press the button.
- ▶ Once set, will appear on the screen.
- Pressing the button once more will cancel selection, and will disappear.
- When selecting multiple images, repeat the above operation.




3 Press the MENU button.

4 Erase.

- Press the ◀▶ buttons or turn the  dial, select [OK] and press the  button.




Select Range

1 Select [Select Range].

- Follow Step 2 on p. 113 to select [Select Range] and press the  button.






2 Select the starting image.

- Press the  button.
- Press the ◀▶ buttons or turn the  dial, select the image and press the  button.



3 Select the ending image.

- Press the ▶ button, select [Last image] and press the  button.
- You cannot select images before the first image.
- Press the ◀▶ buttons, or turn the  dial to select an image, and press the  button.





4 Erase.

- Press the ▼ button to select [Erase] then press the button.



Select images with the dial

Follow Steps 2 and 3 in the above screen, turn the dial, and you can select the first and last images.

Select by Category


1 Select [Select by Date], [Select by Category] or [Select by Folder].

- Follow Step 2 on p. 113 to select a category, and press the button.





2 Select a menu item.

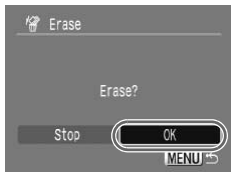- Press the ▲▼ buttons or turn the dial, select the items to set and press the button.
- If you press the ◀▶ buttons, you can display the images within the items.
 - ▶ Once set, ✓ will appear on the screen.
- Pressing the button once more will cancel selection, and ✓ will disappear.



3 Press the MENU button.

4 Erase.

- Press the ◀▶ buttons or turn the  dial, select [OK] and press the  button.


What if you cannot select [Select by Category]?

If there are no images that have been sorted into categories (p. 119), you will not be able to select [Select by Category] in Step 2.



Select All Images



1 Select [All Images].

- Follow Step 2 on p. 113 to select [All Images] and press the  button.

2 Erase.



- Press the ◀▶ buttons or turn the  dial, select [OK] and press the  button.


Protecting Images

You can protect important images and movies so that they cannot be erased by the camera (pp. 25, 113).





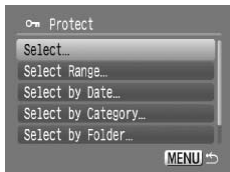

1 Select [Protect].

- Press the **MENU** button and select the  tab, then select [Protect] and press the  button.



2 Select a selection method.

- Press the   buttons or turn the  dial, select a selection method, and press the  button.
- To cancel, or return to the menu screen, press the **MENU** button.



If you format the memory card (p. 50), protected images will also be erased.







Protected images cannot be erased with the camera's erase function. To erase an image, cancel protection first.


Designating Images Individually




Select [Order].

- Follow Step 2 above to select [Select], and press the  button.
- Follow Step 2 on p. 113 to select an image.
- ▶ Once set,  will appear on the screen.
- Pressing the  button once more will cancel selection, and  will disappear.
- When selecting multiple images, repeat the above operation.

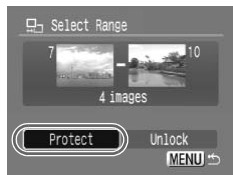

Select Range



1 Select [Select Range].

- Follow Step 2 on p. 117 to select [Select Range], and press the  button.
- Follow Steps 2 and 3 on p. 114 to select images.


2 Protect images.

- Press the  button, select [Protect] and press the  button.





Select by Category



1 Select [Select by Date], [Select by Category] or [Select by Folder].

- Follow Step 2 on p. 117 to select the type, and press the  button.
- Follow Steps 2 and 3 on pp. 115 – 116 to select images.


2 Protect images.

- Press the   buttons or turn the  dial, select [Protect] and press the  button.





Select All Images



1 Select [All Images].

- Follow Step 2 on p. 117 to select [All Images] and press the  button.

2 Protect images.

- Press the   buttons or turn the  dial, select [Protect] and press the  button.



You can unlock groups of protected images if you select [Unlock] in Step 2, while in [Select Range], [Select by Category], or [All Images].

Organizing Images by Category (My Category)

You can categorize images and movies. You can also use the categorized images in the following functions.

- Jump Display (p. 105), Slide Show (p. 107), Erase All (p. 113), Protect (p. 117), Print Settings (DPOF) (p. 132)



1 Select [My Category].

- Press the **MENU** button, and select [My Category] on the tab, and press the button.



2 Select a selection method.

- Press the or turn the dial, select a selection method, and press the button.
- To cancel, or return to the menu screen, press the **MENU** button.



Images taken with [Auto Category] set to [On] will be automatically assigned to a particular category (p. 144).

Designating Images Individually



Select [Order].

- Follow Step 2 above to select [Select], and press the button.
- Follow Step 2 on p. 113 to select images.
- Press the , select a category and press the button.
- ▶ Once set, will appear on the screen.
- Pressing the button once more will cancel selection, and will disappear.
- When selecting multiple images, repeat the above operation.

Select Range



1 Select [Select Range].

- Follow Step 2 on p. 119 to select [Select Range] and press the **FUNC SET** button.
- Follow Steps 2 and 3 on p. 114 to select images.
- Press the **▼** button, select the item and press the **◀▶** buttons, or turn the **○** dial, and select a type.

2 Make the setting.

- Press the **▼** button to select [Select] then press the **FUNC SET** button.



If you select [Deselect] in Step 2, you can deselect all of the images in the [Select Range] category.



Rotating Images

You can change the orientation of an image and save it.



1 Select [Rotate].

- Press the **MENU** button and select the **▶** tab, then select [Rotate] and press the **FUNC SET** button.




2 Rotate the image.



- Press the **◀▶** buttons or turn the **○** dial to select an image to rotate.
- Cycle through the 90°/270°/original orientations with each press of the **FUNC SET** button.
- Pressing the **MENU** button will return you to the menu screen.

Resizing Images

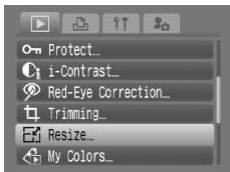



You can resize images that were taken at a high recording pixel setting to a lower pixel setting, and save the resized image as a separate file.






 
1 Select [Resize].

- Press the **MENU** button and select the  tab, then select [Resize] and press the  button.




 
2 Select an image.

- Press the   buttons or turn the  dial, select the image and press the  button.

3 Select an image size.





- Press the   buttons or turn the  dial to select an option, then press the  button.
 - ▶ The [Save new image?] screen will appear.

4 Save the new image.

- Press the   buttons or turn the  dial to select [OK], then press the  button.
 - ▶ The image will be saved as a new file.



5 Display the new image.


- When you press the **MENU** button, the [Display new image?] screen will appear. If you press the   buttons, or turn the  dial to select [Yes] and press the  button, the saved image will display.



- You cannot resize an image to a larger size.
- You cannot resize images taken with **W** and **XS** to a smaller size.

Trimming

You can trim a required portion of a recorded image and save it as new image file.

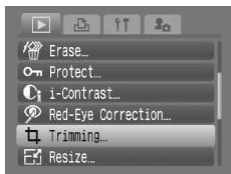

1 Select [Trimming].

- Press the **MENU** button, and select [Trimming] on the **▶** tab, and press the **FUNC SET** button.

2 Select an image.

- Press the **◀▶** buttons or turn the **◉** dial, select the image and press the **FUNC SET** button.

Trimming Area



Trimming Area Display

Recorded pixels after trimming



3 Adjust the trimming area.

- ▶ A green frame will appear around the portion of the image to be trimmed.
- ▶ The original image will display in the upper left, and the image after trimming will display in the lower right.
- If you move the zoom lever to the left or right, you can change the size of the frame.
- If you press the **▲▼◀▶** buttons, you can move the frame.
- If you press the **DISP.** button, you can change the size of the frame.
- In an image with a detected face, a gray frame will appear around faces located in the upper left of the frame, and the frame can be used for trimming. You can switch between frames by turning the **◉** dial.
- Press the **FUNC SET** button.

4 Save as a new image and display.


- Perform the operations in Steps 4 and 5 on p. 121.





- **W**, **S**, and **XS** images cannot be trimmed.
- The width and height ratio of an image that can be changed is fixed at 4:3 (for a vertical image 3:4).
- The number of recorded pixels of an image that has been trimmed will be smaller than the image before trimming.

Adding Effects With the My Colors Function

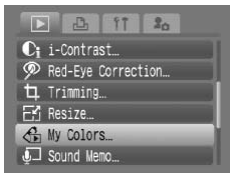



You can change the color of an image and save it as a separate image. Refer to p. 73 for details on each menu item.








1 Select [My Colors].

- Press the **MENU** button, and select [My Colors] on the  tab, and press the  button.

2 Select an image.

- Press the   buttons or turn the  dial, select the image and press the  button.

3 Select a menu item.

- Press the   buttons or turn the  dial to select an option, then press the  button.
- After selecting the menu item, you can enlarge or reduce the image by following the operations in “Q Magnifying Images” (p. 111).
- If you press the  button during magnified display, you can switch to the original image before the color was changed. Pressing the **MENU** button will return you to the menu screen.

4 Save as a new image and display.

- Perform the operations in Steps 4 and 5 on p. 121.



- If you repeatedly change the color of an image, the quality will gradually deteriorate, and you may not get the image you want.
- The color of images taken with My Colors (p. 73) may differ from true color.

Ci Adjusting Dark Subjects (i-Contrast)

Detects dark sections on subjects or in people's faces in images, corrects the brightness, and saves it as a separate file. You can select 4 levels of correction: [Auto], [Low], [Medium], [High].



1 Select [i-Contrast].

- Press the **MENU** button, and select [i-Contrast] on the tab, and press the button.

2 Select an image.

- Press the buttons or turn the dial, select the image and press the button.



3 Select a menu item.

- Press the buttons or turn the dial to select an option, then press the button.

4 Save as a new image and display.

- Perform the operations in Steps 4 and 5 on p. 121.



What if the image wasn't corrected by [Auto] as you planned?


Select [Low], [Medium], or [High] and adjust the image.





- Depending on the image, it may become rough, or not be adjusted correctly.
- Repeatedly adjusting the same image may cause the quality to deteriorate.

Correcting Red-Eye Effect

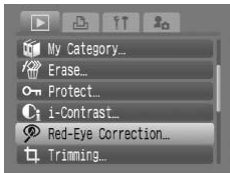



You can automatically correct images with red-eye and save those images as new files.



1 Select [Red-Eye Correction].







- Press the **MENU** button and select the  tab, then select [Red-Eye Correction] and press the  button.
- ▶ The [Red-Eye Correction] screen will appear.

2 Select an image.

- Press the   buttons or turn the  dial to select an image to correct, then press the  button.
- ▶ A frame will appear around the red-eye portion detected by the camera, and [Start] will appear.
- You can enlarge or shrink the image using the operation in “Q Magnifying Images” (p. 111).









3 Correct the image.

- Press the     buttons or turn the  dial to select [Start], then press the  button.
- ▶ The image will correct, and [New File] will appear.
- You can enlarge or shrink the image using the operation in “Q Magnifying Images” (p. 111).



4 Save as a new image and display.


- Press the     buttons, or turn the  dial to select [New File], and press the  button.
- ▶ The image will be saved as a new file.
- Perform the operation in Step 5 on p. 121.

Manual Correction

When the camera cannot automatically detect and correct red-eye, correct it manually.








1 Add a correction frame.






- In Step 3 on p. 125, select [Add Frame] and then press the  button.



2 Set the position and size.

- Press the     buttons to move the correction frame (green) to the red-eye section, move the zoom lever to adjust the frame size so that it surrounds only the red-eye section.
- ▶ The area inside the frame will appear enlarged in the lower right of the screen.
- If you press the  button, the first frame (white) will be fixed, and a new correction frame will appear.
- You can add up to 35 correction frames.
- When you have set the frame positions and sizes, press the **MENU** button, then follow Steps 3 and 4 on p. 125.

Removing Frames


- To remove a frame, in Step 3 on p. 125, select [Remove Frame] and then press the  button.
- Press the   buttons or turn the  dial to select a frame (green), then press the  button.





- When [Overwrite] in Step 4 on p. 125 is selected, the uncorrected image is overwritten with the corrected data, erasing the original image.
- Some images may not be properly corrected.
- Repeatedly correcting the same image may cause the quality to deteriorate.
- Protected images cannot be overwritten.

Attaching Sound Memos

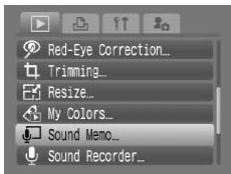



You can record and attach a sound memo (WAVE format) to an image. The attached sound memo can be up to approximately 1 minute long.



1 Select [Sound Memo].







- Press the **MENU** button and select the  tab, then select [Sound Memo] and press the  button.

2 Select an image.

- Press the   buttons or turn the  dial to select an image, then press the  button.
- ▶ The sound memo control panel will appear on the screen.






 









3 Record the memo.

- Press the   buttons or turn the  dial to select  , then press the  button.
- You can pause/restart recording by pressing the  button.

Sound Memo Operation Panel

Press the   buttons, or turn the  dial to select, then press the  button.

	Exit		Starts recording
	Pause (recording or playback)		Play
	Press the   buttons or turn the  dial to select [Erase], then press the  button to erase the sound memo.		

- You can adjust the volume during playback with the   buttons.
- Select  and press the  button, then press the **MENU** button to return to the menu screen.



- The sound attached to an image can also be played with the supplied software.
- Sound memos cannot be erased from protected images.

Transferring Images to a Computer


“Downloading Images with the Camera” (p. 35) in Chapter 1 explained how to transfer images using [New Images]. This section will explain other ways to transfer images. These designation methods comply with the DPOF (Digital Print Order Format) standards.









 




1 Select a menu item.

- Select the menu item in the Step 1 operation in “Downloading Images with the Camera” (p. 35).

2 Transfer the images.

- Press the  button.
 - ▶ Images matching the selected option will be transferred.
 - ▶ The camera returns to the [Direct Transfer] menu once transferring is complete.

Direct Transfer Options

 All Images	Transfers all images from the memory card.
 New Images	(p. 35)
 DPOF Trans. Images	Transfers all images designated for transfer at once (p. 129).
 Select & Transfer	Select and transfer images one at a time. Press the  buttons or turn the  dial to select an image, then press the  button to transfer the image.
 Wallpaper	Select and transfer an image to use as your computer desktop's background (wallpaper). Press the  buttons or turn the  dial to select an image, then press the  button to transfer the image.



Designating Images for Transfer (DPOF)


You can select individual images you want to transfer to a computer. These designation methods comply with the DPOF (Digital Print Order Format) standards.

Designating Images Individually





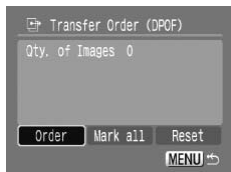

1 Select [Transfer Order].

- Press the **MENU** button and select the  tab, then select [Transfer Order] and press the  button.










2 Select [Order].

- Press the   buttons or turn the  dial to select [Order], then press the  button.




3 Select an image.





- Press the   buttons or turn the  dial to select an image.
- Press the  button to designate the image.  appears in the top left of the screen.
- Press the  button again to cancel designation.  will disappear.
- When selecting multiple images, repeat the step above (maximum of 998 images).
- Pressing the **MENU** button twice will save the settings to the memory card and return you to the menu screen.

Select All Images




- When you select [Mark all] in Step 2 on p. 129, the screen shown left will appear.
- If you select [OK] and press the  button, all images will be designated together.
- If you press the **MENU** button, the selected contents will be saved, and you will return to the menu.


Canceling All Selections

On the screen in Step 2 on p. 129, if you select [Reset] and press the  button, then press the  buttons or turn the  dial to select [OK] and press the  button, all marks will be cleared.



 may display when using a memory card with transfer settings set by a different DPOF-compliant camera. These settings will be overwritten by those set by your camera.



Print List (DPOF)

Directly after shooting, or while in playback, by pressing the  button you can add images to the print list (DPOF). You can print from a print list simply by connecting your camera and printer. These designation methods comply with the DPOF (Digital Print Order Format) standards.

Add Images to the Print List





 





1 Select an image.

- Press the  buttons or turn the  dial and select the image.

2 Press the button (videos will be excluded).

3 Print list.

 - Press the  buttons and select the number of prints, press the  buttons or turn the  dial, select [Add] and press the  button.
- To cancel adding images, press the  button again, press the  buttons, or turn the  dial, select [Remove] and press the  button.

Print



Examples are given using Canon SELPHY ES series, and SELPHY CP series printers. Please also refer to the *Direct Print User Guide*.

Number of copies to print



1 Connect the camera to the printer (p. 26).

2 Print.


- Press the  buttons, select [Print now] and press the  button.
- ▶ Printing will start.
- If you stop the printer during printing and start again, it will start from the next print.

Designating Images for Printing (DPOF)



You can make print settings to images on a memory card (up to 998 images), such as which images to print and how many prints to make. You can then print all the selected images at once or take the memory card to a photo developer to order prints. Refer to the *Direct Print User Guide* for details on how to print the selected images. These designation methods comply with the DPOF (Digital Print Order Format) standards.

Print Settings

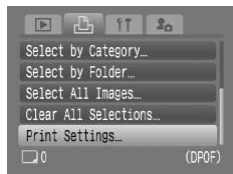


You can make settings for the print type, date and file number. These settings apply to all images selected for printing.





 1 Select [Print Settings].


- Press the **MENU** button and select the  tab, then select [Print Settings] and press the  button.

2 Make the settings.


- Press the  buttons to select a menu item, then press the  buttons or turn the  dial to select an option.
- ▶ Pressing the **MENU** button will make the settings and return you to the menu screen.

Print Type	<input type="checkbox"/>	Standard	Prints one image per page.
		Index	Prints several reduced size images per page.
	<input type="checkbox"/> 	Both	Prints both standard and index formats.
Date	On	Prints date from shooting information.	
	Off	-	
File No.	On	Prints file number.	
	Off	-	
Clear DPOF data	On	After printing, all images selected for printing will be removed.	
	Off	-	




- Depending on the printer or photo developer, print settings may not be reflected.
-  may display when using a memory card with print settings set by a different DPOF-compliant camera. These settings will be overwritten by those set by your camera.
- Some printers may print the date twice on these images if [Date] is also set to [On].





- When set to [Index], [Date] and [File No.] cannot be set to [On] at the same time.
- The date will be printed in the style set in [Date/Time] in  (p. 17).

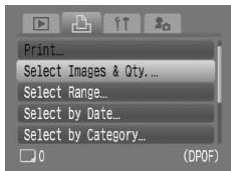


 


Selecting the Number of Copies





1 Select [Select Images & Qty.].

- Press the **MENU** button and select the  tab, then select [Select Images & Qty.] and press the  button.

2 Select an image.

- Press the  buttons or turn the  dial to select an image to set, then press the  button.
 - ▶ You will be able to set the number of print copies.
- If you select [Index],  appears on the screen.
- Press the  button again to cancel designation.  will disappear.

3 Set the number of prints.

- Press the  buttons or turn the  dial to set the number of prints (maximum 99).
- Repeat Steps 2 and 3 to set other images and the number of prints.



- For [Index], you cannot set the number of prints. Only select images with the operation in Step 2.
- ▶ Pressing the **MENU** button will make the settings and return you to the menu screen.

Select Range



1 Select [Select Range].

- Select [Select Range] in Step 1 on p. 133, and press the **FUNC SET** button.
- Make selections by following the operations in Steps 2 and 3 on p. 114.

2 Make print settings.

- Press the ▲▼ buttons, select [Order] and press the **FUNC SET** button.

Select by Category




1 Select [Select by Date], [Select by Category] or [Select by Folder].

- Follow Step 1 on p. 133 to select a type, and press the **FUNC SET** button.
- Follow Steps 2 and 3 on pp. 115 – 116 to select images.


2 Make print settings.

- Press the ◀▶ buttons or turn the **DISP** dial, select [OK] and press the **FUNC SET** button.

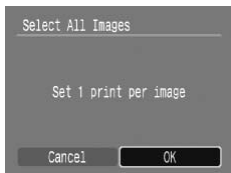

Set All Images to Print Once






1 Select [Select All Images].

- Select [Select All Images] from the screen in Step 1 on p. 133 and press the  button.

2 Make print settings.

- Press the ◀▶ buttons or turn the  dial, select [OK] and press the  button.

Canceling All Selections

After selecting [Clear All Selections] and pressing the  button in Step 1 on p. 133, press the ◀▶ buttons or turn the  dial to select [OK] and press the  button to cancel all selections.



Sound-Only Recording (Sound Recorder)


You can continuously record voice only, without images, up to a maximum length of 2 hours.

You can select 3 levels of sound quality. They are, in order of highest to lowest: [44.100kHz], [22.050kHz], [11.025kHz].



1 Select [Sound Recorder].

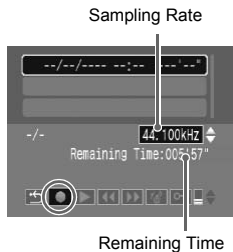


- Press the MENU button, and select [Sound Recorder] from the  tab and press the  button.



2 Changing the sound quality.











 



 

 

- Press the ▲▼ buttons, and select the sound quality.

3 Record.

- Press the ◀▶ buttons or turn the  dial to select ●, then press the  button.
- ▶ Recording will start, and the recording time will appear.
- If you press the  button, recording will stop.

Sound Memo Operation Panel

Press the ◀▶ buttons, or turn the  dial to select the menu item and press the  button.

	Exit
	Starts recording.
	Stops recording or playback.
	Press the ▲▼ buttons to select Voice Recorder, and if you press the  button, it will play back.
	If you continuously press the  button, it will rewind (audio will not play).
	If you continuously press the  button, it will fast-forward (audio will not play).
	If you press the ◀▶ buttons or turn the  dial and select [Erase], then press the  button, audio will erase. If you press the  button in [Erase All] and then press the ◀▶ buttons or turn the  dial to select [OK] and press the  button, all audio will be erased.
	Press the  button to protect audio.
	Press the ▲▼ buttons to adjust the playback volume.

Approximate Size for Sound Quality and Recording Time

Sound quality	Size of voice recording	32 MB (Supplied)	2 GB	8 GB
11.025 kHz	22 KB/sec.	23 min. 28 sec.	25 hrs. 22 min. 35 sec.	101 hrs. 23 min. 47 sec.
22.050 kHz	44 KB/sec.	11 min. 44 sec.	12 hrs. 41 min. 18 sec.	50 hrs. 41 min. 53 sec.
44.100 kHz	88 KB/sec.	5 min. 52 sec.	6 hrs. 20 min. 39 sec.	25 hrs. 20 min. 57 sec.



When the memory card becomes full, recording will automatically stop.

8

Customizing the Camera

You can customize various functions to suit your shooting preferences. The first part of this chapter explains convenient commonly used functions. The latter part explains how to change shooting and playback settings to suit your goals.



Changing Functions

You can customize convenient commonly used functions from the **FUNC** tab (p. 46).

Turning off the Power Saving Function


You can set the power saving function (p. 51) to [Off]. However, setting it to [On] is recommended to save battery power.



- Select [Power Saving], then press the **FUNC SET** button.
- Press the **▲▼** buttons to select [Auto Power Down], then use the **◀▶** buttons or turn the **○** dial to select [Off].
- If you set the Power Saving function to [Off], be careful not to forget to turn off the camera after use.

Power Saving during Shooting


You can adjust the time before the monitor automatically turns off (p. 51).

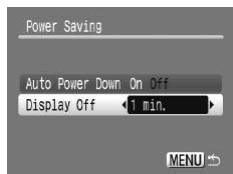

- Select [Power Saving], then press the **FUNC SET** button.
- Press the **▲▼** buttons to select [Display Off], then use the **◀▶** buttons or turn the **○** dial to select a time.
- In order to save battery power, it is recommended to select less than [1min.].


Using the World Clock

When traveling abroad, you can record images with local dates and times simply by switching the time zone setting if you pre-register the destination time zones. You can enjoy the convenience of not having to switch the Date/Time settings.

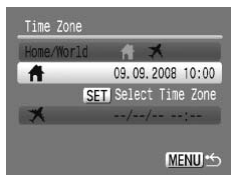


1 Set the home time zone.

- Select [Time Zone] and press the button.
- When setting this for the first time, confirm the information that displays on the screen at the left, and press the button.
- Press the or turn the dial to select the home time zone, then press the button. To set daylight saving time (adds 1 hour), press the to select .

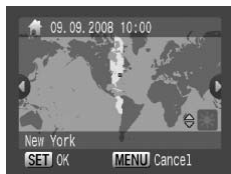

2 Set the world time zone.

- Press the to select , then press the button.
- Press the or turn the dial to select the destination time zone, then press the button.
- You can set daylight saving time just as in Step 1.

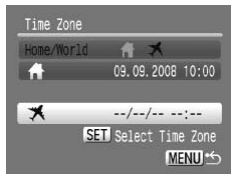

3 Select the world time zone.


- Press the and select [Home/World].
- Press the or turn the dial to select , then press the **MENU** button.
- will appear in the [Time Zone] or shooting screen (p. 42).



In , if you change the date or time (p. 17), your home time and date will automatically change.

Changing the File Number Assignment

Images you shoot are automatically assigned file numbers, in the order they were taken, from 0001 – 9999, and saved to folders of up to 2000 images. You can change the file number assignment.

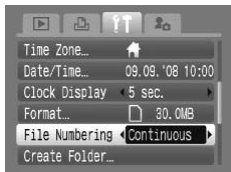


- Select [File Numbering], then press the ◀▶ buttons to select an option.
- [Continuous]: Even if you shoot using a new memory card, the file numbers are assigned consecutively until an image with the number 9999 is taken/saved.
- [Auto Reset]: If you replace the memory card with a new one, file numbering begins with 0001 again.







- For either setting [Continuous] or [Auto Reset], if you use a memory card already containing images, the newly assigned file numbers may continue the existing numbering. If you want to start over with file number 0001, format the memory card before use (p. 50).
- Refer to the *Software Starter Guide* for information regarding folder structure or image type.

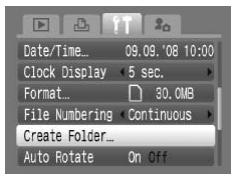Creating a Folder


You can create new folders to save your images to.







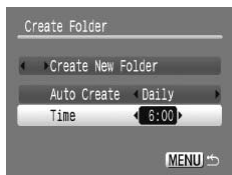


- Select [Create Folder], then press the  button.
- Select [Create New Folder], then press the ◀▶ buttons or turn the  dial to select .
-  will display on the screen (p. 42) when shooting, and shots will be recorded into a new folder.

Creating Folders by Day and Time

 
You can set a day and time for folder creation.





- Select [Create Folder], then press the  button.
- Select [Auto Create], then press the   buttons or turn the  dial to select an interval.
- Select [Time], then press the   buttons or turn the  dial to set a time.
- The new folder will be created on the set day and time. Images shot after the creation date are saved to the new folder.


Turning off Auto Rotate

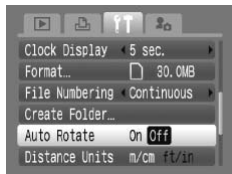
When you play back images on the camera or a computer, images shot in vertical orientation automatically rotate and display vertically. You can turn off this function.





- Select [Auto Rotate], then press the   buttons to select [Off].


Changing the Lens Retract Time

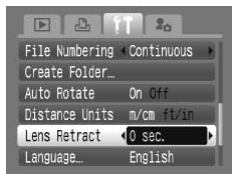For safety reasons, The lens retracts about 1 minute after pressing the  button when in a shooting mode (p. 24). You can set the retract time to [0 sec.].



- Select [Lens Retract], then press the   buttons to select [0 sec.].

Changing Shooting Functions


If you set the mode dial to **P/M** and then to **P** mode, you can change the settings on the  tab (p. 46).







Before attempting to shoot using a function explained in this chapter in modes other than **P** mode, check if the function is available in those modes (pp. 158 – 159).

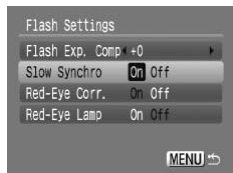Using the Slow Synchro

You can use this to shoot people and main subjects at the appropriate exposure, and the shutter speed is lowered so that both the subject and the background appear at the proper brightness.




- Select [Flash Settings], then press the  button.
- Press the  buttons or turn the  dial to select [Slow Synchro], then press the  buttons to select [On].







- Attach a tripod to the camera, as the shutter speed is slow. You are recommended to shoot with the [IS Mode] set to [Off] (p. 145).
- Even if the flash fires, ensure that the subject does not move until the shutter sound ends.

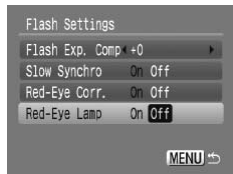Turning off the Red-Eye Reduction Function


The red-eye reduction lamp lights in order to reduce the red-eye effect that occurs when shooting in dark conditions using the flash. You can turn off this function.



- Select [Flash Settings], then press the  button.
- Press the  buttons or turn the  dial to select [Red-Eye Lamp], then press the  buttons to select [Off].

Turning off the AF Assist Beam


When the camera cannot focus when you press the shutter button halfway, the lamp will automatically light to assist focusing. You can turn off the lamp.

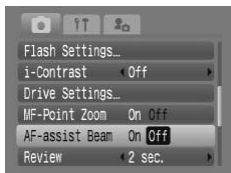

- Select [AF-assist Beam], then press the ◀▶ buttons to select [Off].

Displaying Image Information Right After Shooting


You can change the image display that appears after shooting.

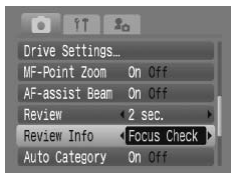

- Select [Review Info], then press the ◀▶ buttons to select an option.
- [Detailed]: Displays detailed information (p. 43).
- [Focus Check]: The area inside the AF frame displays enlarged, allowing you to check the focus. The procedure is the same as in “Checking the Focus or People’s Expressions (Focus Check)” (p. 110).

Categorizing Images Automatically

Images can be automatically categorized (p. 119) when shooting.

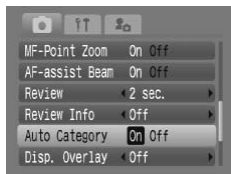

- Select [Auto Category], then press the ◀▶ buttons to select [On].
- : For images shot in , or mode, or images with faces detected when [AF Frame] is set to [Face Detect].
- : For images shot in or mode.
- : For images shot in , , , , or mode.



Movies cannot be automatically categorized, but can be categorized using My Category (p. 119).

Displaying the Overlay

You can display gridlines for vertical and horizontal guidance, or 3:2 guide to confirm the printable area for L size or postcard size prints.




- Select [Disp. Overlay], then press the ◀▶ buttons to select an option.
- [Grid Lines]: A grid overlays the display.
- [3:2 Guide]: The areas outside the 3:2 range are grayed out. This area will not print when printing on paper with a 3:2 aspect ratio.



- In **W** mode, you cannot set [3:2 Guide] or [Both].
- Grid Lines will not be recorded on the image.
- The gray areas displayed with [3:2 Guide] are the areas that will not be printed. The actual image recorded will include the portion in the gray areas.

Changing the IS-Mode Settings

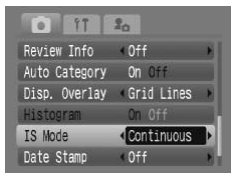






- Select [IS Mode], then press the ◀▶ buttons to select an option.
- [Continuous]: The image stabilization is always on. You can confirm the result directly on the display, which makes it easier to check the composition or focus of the subject.
- [Shoot Only]: The image stabilization is only on in the moment of shooting.
- [Panning]: The image stabilization only works for the effect of up and down motion. This option is recommended for shooting objects moving horizontally.









 


- If camera shake is too strong, fix the camera to a tripod. However, it is recommended to set IS Mode to [Off] when the camera is fixed to a tripod.
- When using [Panning], hold the camera horizontally. Image stabilization does not work when the camera is held vertically.

Registering Functions to the Button



- Select [Set  button], then press the  button.
- Press the ▲▼◀▶ buttons or turn the  dial to select the functions to register, then press the  button.
- Pressing the  button will call up the registered function.








- Press  if you want to cancel a function.
- When this  symbol is shown on the bottom right of an icon, the function cannot be used in the current shooting mode or function setting.
- In , each press of the  button records white balance data (p. 71), and the white balance settings also change to .
- In , each time you press the  button, the shutter sound's  clip (p. 147) in the  tab will play. Use this when you want to draw the attention of the subject before shooting.

Changing Playback Functions





You can make settings in the  tab by pressing the  button (p. 46).

Registering Functions to the Button




- Select [Set Play button] and press the  button.
- Press the  buttons or turn the  dial to select an option, then press the  button.
- Pressing the  button in Playback mode will call up the registered function.




- Selecting  (Standard) will let you switch between turning the camera off and Playback mode, or between Shooting and Playback modes (p. 24).
- If you select  or , you cannot turn the camera off with the  button.
- Slideshows cannot be started during index playback.

Selecting the Image that Resumes in Playback




- Select [Resume], then press the  buttons to select an option.
- [Last shot]: Resumes with the most recently shot image.
- [Last seen]: Resumes with image last viewed.

Changing the Start-up Image or Sound (My Camera Settings)


You can set images you have taken as the start-up image that displays when the camera is turned on, or record sounds for each of the cameras operations with the  menu.

Change





- Press the ▲▼ buttons or turn the  dial to select an option.
- Press the ◀▶ buttons to select a setting.
- Press the MENU button to complete the setting.
- Select [Theme] to set all the items to the same number setting.

 



Register

When you press the  button and set the camera to playback mode, you can register sounds and images.






 



- Press the ◀▶ buttons to select  or , then press the DISP button.



- Start-up Image: Press the ◀▶ buttons or turn the  dial to select an image, then press the  button.
- Press the ◀▶ buttons or turn the  dial to select [OK], then press the  button to complete registration.

Changing the Start-up Image or Sound (My Camera Settings)



- Sounds: Press the ◀▶ buttons or turn the  dial to select ●, then press the  button to record.
- After recording, press the ◀▶ buttons or turn the  dial to select , then press the  button.
- Press the ◀▶ buttons or turn the  dial to select [OK], then press the  button to complete registration.



Register images or sounds saved on a computer

You can register images or sounds to the camera using the included software (ZoomBrowser/ImageBrowser). Refer to the *Software Starter Guide* for details.



Any previously registered image or sound will be overwritten when registering a new image and sound (p. 147).



Use the supplied software (ZoomBrowser EX/ImageBrowser) to restore the default My Camera settings to the camera. Refer to the *Software Starter Guide* for details.

9


Useful Information for Using the Camera

This chapter introduces camera accessories and contains lists of functions. The index also appears at the end.




Using Household Power

If you use AC Adapter Kit ACK-DC30 (sold separately), you can use the camera without worrying about how much charge is left in the battery.

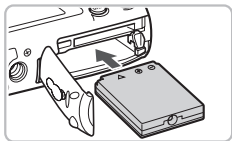


1 Insert the coupler.

- Open the cover (p. 14) and insert the coupler as shown until it locks into place with a click.
- Close the cover (p. 14).

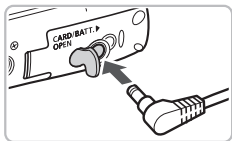

2 Plug the cord into the camera.

 - Open the cover and fully insert the plug into the coupler.



3 Connect the power cord.

- Connect the power cord to the compact power adapter, then plug the other end into a power outlet.
- You can turn the camera on to use it.
- After you finish, turn off the camera and unplug the power cord from the power outlet.



Do not unplug the power cord with the camera turned on. This could erase images you have taken or damage the camera.

Using a Supplementary Flash

High-Power Flash HF-DC1 (sold separately) is used to supplement the camera's built-in flash when the subject is too far away for proper illumination. For details on attaching and using the High-Power Flash, refer to the user guide provided with the flash.



When can you not use the HF-DC1?

When in **M** mode (p. 89)

You Think There is a Problem

If you think there is a problem with the camera, first check the following. If the items below do not solve your problem, contact a Canon Customer Support Help Desk as listed on the included customer support list.

Power

You pressed the power button, but nothing happened.

- Confirm that the battery/batteries is properly inserted (p. 14).
- Confirm that the memory card/battery cover is securely closed (p. 14).
- If the battery terminals are dirty, battery performance will decrease. Clean the terminals with a cotton swab and re-insert the battery/batteries several times.

Battery/batteries is consumed quickly.

- Battery performance decreases at low temperatures. Warm the battery/batteries, such as by placing them in your pocket with the terminal cover on.

Lens will not retract.

- Do not open the memory card/battery cover while the power is on. After closing the memory card/battery cover, turn the power on then back off (p. 15).

TV output

Image is distorted or not showing on TV (p. 112).

Shooting

Cannot shoot.

- Set the mode dial to **AUTO** (p. 40).
- When in playback (p. 24), press the shutter button halfway (p. 20).

Screen doesn't display.

- Press the **DISP.** button (p. 42).

Camera screen is black at start-up.

- Images that have been edited on a computer, have had their name changed, or have been taken with another camera may not display correctly when set in the My Camera function (p. 147).

Screen does not display properly in dark places (p. 44).

Screen does not display properly while shooting.

Please note, the following issues will not be recorded in still images, but will be recorded in movies.

- When the camera is subjected to powerful light sources, the display may darken.
- Under fluorescent lighting, the screen may flicker.
- When shooting bright light sources, a bar of light (purplish red) may appear on the screen.

⚡ appears on the screen and the shot cannot be taken even though the shutter button was pressed fully (p. 23).

 **appears when the shutter button was pressed halfway (p. 57).**

 
- Set the [IS mode] to [On] (p. 145).
- Set the flash to  (p. 67).
- Increase the ISO speed (p. 70).


Image is blurred.

- Shoot the subject within the focusing distance (p. 163).
- Set the [AF-assist beam] to [On] (p. 143).
- Confirm that functions which you do not intend to use (macro, etc.) are not set.
- Shoot using the focus lock, AF lock or manual focus (pp. 78, 84, 85).

Even when you press the shutter button halfway, the frame does not appear, and the camera does not focus.

- If you center on the light and dark contrasting area of the subject and push the shutter button halfway, or repeatedly push the shutter button halfway, the frame will appear and the camera will focus.

Subject is too dark.

- Set the flash to  (p. 67).
- Adjust the brightness with exposure compensation (p. 72).
- Use the AE lock, or spot metering to shoot (p. 87).

Subject is too bright (overexposed).



- Set the flash to  (p. 57).
- Adjust the brightness with exposure compensation (p. 72).
- Use the AE lock, or spot metering to shoot (p. 87).
- The subject is too bright due to ambient lighting.

Image is dark even though the flash fired (p. 23).

- Increase the ISO speed (p. 70).

Image taken using the flash is too bright (overexposed).

- Shoot within an appropriate distance for flash photography (p. 67).
- Set the flash to  (p. 57).

White dots appear on the image when shooting with the flash.

- Light from the flash has reflected off dust particles or other objects in the air.

Image appears rough or grainy.

- Shoot with the ISO speed on a lower setting (p. 70).
- Depending on the shooting mode, when shooting in a high ISO speed the image may appear rough or grainy (pp. 55, 56).

Eyes appear red (p. 92).

- Set the [Red-Eye Lamp] to [On] (p. 142). When shooting [with the flash, the lamp (on the front of the camera) lights (p. 40), and for approximately 1 second while the camera is reducing red-eye, it is not possible to shoot. It is more effective if the subject is looking directly at the lamp. Even better results can be obtained by increasing the lighting in indoor settings or approaching closer to the subject.

Recording images to the memory card takes a long time, or continuous shooting slows down.

- Format the memory card in the camera (p. 50).

When you can't make settings for shooting functions or FUNC. menu

- The items in which settings can be made differ depending on the shooting mode. Check the Menu lists (pp. 156 – 159).

Shooting movies**Correct shooting time does not display, or stops.**

- Format the memory card in the camera, or use a memory card capable of recording at high speeds. Even when the shooting time does not display properly, the video recorded will be the length that it was actually shot (p. 29).

“!” displayed on the LCD monitor, and shooting ended automatically.

Camera's internal memory was insufficient. Try one of the following.

- Format the memory card in the camera (p. 50).
- Lower the recorded pixels (p. 99).
- Use a memory card capable of recording at high speeds.

Playback**Cannot play back images or movies.**

- If the file name or folder structure is changed on a computer, you may not be able to play back images or movies. Refer to the *Software Starter Guide* for information regarding folder structure or file names.

Playback stops, or audio cuts out.

- Use a card that has been formatted on this camera (p. 50).
- If you copy a movie to a memory card that reads slowly, playback may interrupt momentarily.

List of Messages That Appear on the Screen

If error messages appear on the LCD monitor, try one of the following solutions.

No memory card

- The memory card is not installed in the correct direction. Install the memory card in the correct direction (p. 14).

Card locked!

- The SD memory card or SDHC memory card's write protect tab is set to "Lock". Unlock the write protect tab (p. 16).

Cannot record!

- You attempted to shoot an image without the a memory card, or with a memory card installed incorrectly. Install the memory card in the correct direction when shooting (p. 14).
- You cannot attach sound memos to movies (p. 127).

Memory card error (p. 51)

- If this error message appears even when using the supplied memory card, contact your Canon Customer Support Help Desk as there may be a problem with the camera.

Memory card full

- There is not enough free space on the memory card to shoot (pp. 21, 53, 65, 81) or edit images (pp. 120 – 127). Erase the images (pp. 25, 113) to open space for new images, or insert an empty memory card (p. 14).

Change the battery (p. 14)

No image

- There are no images recorded on the memory that can be displayed.

Protected! (p. 117)

Unidentified Image/Incompatible JPEG/Image too large./RAW

- Unsupported images or data, or corrupted image data cannot be displayed.
- Images manipulated on a computer, that have had their file name changed, or have been taken with a different camera may not display.

Cannot magnify!/Cannot rotate/Cannot modify image/Cannot register this image!/Cannot assign to a category/Unselectable image.

- Incompatible images cannot be magnified (p. 111), rotated (p. 120), edited (pp. 120 – 127), registered to the start-up screen (p. 147), categorized (p. 119), or added to a print list (p. 132).
- Images manipulated on a computer, that have had their file name changed, or have been taken with a different camera may not be magnified, rotated, edited, registered to the start-up screen, categorized, or added to a print list.
- Movies cannot be magnified (p. 111), edited (pp. 120 – 127), or registered to the start-up screen (p. 147).

Cannot select!

- When selecting the selection range (pp. 114, 118, 120), you tried to select a starting image that was after the last image or you tried to select an ending image that was before the starting image.
- You tried to select more than 501 images (pp. 114, 118, 120).

Cannot transfer!

- You cannot send incompatible images by direct transfer or images with corrupted data even if they are selected.
- You cannot send a movie as a background image on your PC even if it is selected (p. 128).

Too many marks

- You selected more than 998 images to send in print settings. Select less than 998 images (p. 132).

Cannot complete!

- Print settings or transfer settings could not be saved correctly. Reduce the number of settings and try again (pp. 129, 132).

Naming error!

- The file name could not be created because there is an image with the same name as the folder that the camera is attempting to create, or the highest possible file number has already been reached (p. 140). In the **FILE** menu, change [File Numbering] to [Auto reset] (p. 140) or format the memory card (p. 50).

Incompatible WAVE

- Since the data type of the existing sound memo is incorrect, no new sound memo can be added or played back (p. 127).

Communication error

- Images could not be transferred to the computer due to the large amount of images (approx. 1000) stored on the memory card (p. 31). Use a commercially available USB card reader to download the images.

Lens error, restart camera

- A lens error was detected. Press the power button to turn the camera off and back on (p. 40). If this error message continues to display, contact your Canon Customer Support Help Desk as there may be a problem with the lens.
- This error can occur if you hold the lens while it is in motion or when using it in a location with excessive dust or sand in the air.

Exx (xx: number)

- A camera error was detected. Press the power button to turn the camera off and back on (p. 40).
- If an error code displays directly after taking a picture, the shot may not have been recorded. Check image in playback mode.
- If this error code reappears, note the number and contact your Canon Customer Support Help Desk as there may be a problem with the camera.

Functions Available in Each Shooting Mode

Function	Shooting modes	P/M				
		AUTO	P			
Flash (pp. 57, 67)		○	○	—	○	○
		—	○	○	○	○
		○	○	○	○	○
Focusing Zone (pp. 63, 67, 85)		○	○	○	○	○
		○	○	○	—	○
		—	○	○	—	○
	MF	—	○	○	—	○
ISO Speed (p. 70)	ISO AUTO	○	○	—	○	○
	ISO FT	○	○	—	○	—
	ISO 80 100 200 400 800 1600	—	○	○	○	—
Drive Mode (pp. 61, 62, 72, 74, 75)		○	○	○	○	○
		—	○	○	○	○
		○	○	○	—	○
		○	○	○	○	○
		○	○	○	○	○
AF Lock (p. 84)		—	○	○	○	—
AE Lock (p. 87)/FE Lock (p. 88)		—	○	—	○	—
TV Display (p. 76)		○	○	○	—	○
Face Selection (p. 86)		○	○	○	—	○
Information Display (p. 42)	On	○	○	○	*3	○
	Off	○	○	○		○
	No Display	○	○	○		○

Function menu

Exposure Compensation (p. 72)/Exposure Shift (p. 99)		—	○	—	○	○	○
White Balance (p. 71)	AWB	○	○	○	○	○	○
		—	○	○	○	—	—
My Colors (p. 73)		—	○	○	○	—	—
Flash Exposure Compensation (p. 88)		—	○	—	○	—	—
Flash Output (p. 90) / Tv/Av Settings (p. 89)		—	—	○	—	—	—
Metering System (p. 87)		○	○	○	○	○	○
	[]	—	○	○	—	—	—
Image Quality (Compression Ratio) (p. 68)		○	○	○	○	○	○
Recording Pixels (p. 68, 98)	L M1 M2 M3 S	○	○	○	○	○	○
	640 320	—	—	—	—	—	—

*1 ISO3200 (p. 56) is set by default. *2 Only AE lock available. *3 Quick Shot screen displayed.

Functions Available in Each Shooting Mode

SCN																
○	○	○	○	○	○	—	—	○	—	—	○	—	—	—	—	
○	○	○	○	○	○	—	○	○	—	—	○	○	—	—	—	
○	○	○	○	○	○	○	○	○	○	○	○	○	○	—	—	
○	○	○	○	○	○	○	○	○	○	—	○	○	○	○	○	
—	○	—	○	○	○	—	○	○	○	○	○	○	○	○	○	
—	○	—	○	○	○	—	○	○	○	○	—	○	○	○	○	
○	○	○	○	○	○	—	○	○	○	—	○	—	○	○	○	
○	○	○	○	○	○	○	○	○	*1	○	○	○	○	○	○	
—	—	—	—	—	—	—	—	—		○	—	—	—	—	—	—
—	—	—	—	—	—	—	—	—		○	—	—	—	—	—	—
○	○	○	○	○	○	○	○	○	○	○	○	○	○	—	—	
○	○	○	○	○	○	○	○	○	○	○	—	—	—	—	—	
○	○	○	○	○	○	—	○	○	○	○	—	—	—	—	—	
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
○	○	○	○	○	○	○	○	○	○	○	○	○	○	—	—	
—	—	—	—	—	—	—	—	—	—	○	—	—	○	○	—	
—	—	—	—	—	—	—	—	—	—	○	—	—	*2	—	—	
○	○	○	○	○	○	○	○	○	○	○	○	—	○	○	○	
○	○	○	○	○	○	—	○	○	○	○	○	—	—	—	—	
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
○	○	○	○	○	○	○	○	○	○	○	○	—	○	—	—	
○	○	○	○	○	○	○	○	○	○	—	—	—	—	—	—	

Function menu

○	○	○	○	○	○	○	○	○	—	○	—	○	○	—	—
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	—	—	—	—	—	—	—	—	—	○	—	○	○	—	—
—	—	—	—	—	—	—	—	—	—	○	—	○	○	—	—
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	—	—	—	—	—	—	—	—	—	○	—	—	—	—	—
○	○	○	○	○	○	○	○	○	○	○	○	○	○	—	—
○	○	○	○	○	○	○	○	○	*4	*5	○	*5	—	—	—
—	—	—	—	—	—	—	—	—	—	—	—	—	○	○	○

*4 M3 is set by default. *5 is not available.

○ Selectable — Not selectable

Menus

Shooting Menu

Function		Shooting modes		AUTO	P/M				
		P	M		P	M			
AF Frame (p. 82)	Face Detect			○	○	○	○	○	○
	AiAF			○	○	○	—	○	○
	Center			○	○	○	—	○	○
AF Frame Size (p. 82)	Normal/Small			—	○	○	—	—	—
AF-Point Zoom (p. 83)	On/Off			○	○	○	—	○	○
Servo AF (p. 84)	On/Off			○	○	○	—	○	○
Digital Zoom (p. 58)	Standard/Off			○	○	○	—	○	○
	Digital Tele-converter (1.7x/2.2x)			○	○	○	—	○	○
Flash Settings (pp. 92, 142)	Slow Synchro On/Off			—	○	*1	○	—	*1
	Red-Eye Corr. On/Off			○	○	○	○	○	○
	Red-Eye Lamp On/Off			○	○	○	○	○	○
	Flash Exposure Compensation			—	○	—	○	—	—
	Flash Output Maximum/Medium/Minimum			—	—	○	—	—	—
i-Contrast (p. 91)	Off/Auto			○	○	○	○	—	—
Drive Settings (pp. 62, 74, 75)	Face Self-Timer 1 – 10 shots			○	○	○	—	○	○
	Self-Timer 10 sec./2 sec.			○	○	○	○	○	○
	Custom*3			○	○	○	○	○	○
MF Magnified Display (p. 85)	On/Off			—	○	○	—	○	○
AF-assist Beam (p. 143)	On/Off			○	○	○	○	○	○
Review (p. 52)	Off/2 – 10 sec./Hold			○	○	○	○	○	○
Review Info (p. 143)	Off/Detailed/Focus Check			○	○	○	○	○	○
Save Original (p. 95)	On/Off			—	—	—	—	—	—
Auto Category (p. 144)	On/Off			○	○	○	○	○	○
Disp. Overlay (p. 144)	Off/Grid Lines			○	○	○	—	○	○
	3:2 Guide/Both			○	○	○	—	○	○
Histogram	On/Off			—	○	○	*1	—	—
IS Mode (p. 145)	Continuous/Off			○	○	○	○	○	○
	Shoot Only/Panning			○	○	○	○	○	○
Date Stamp (p. 60)	Off/Date/Date & Time			○	○	○	○	○	○
Set button (p. 145)				○	○	○	○	○	○

*1 Always [On].


*2 Available when is selected.

*3 Possible settings: 0 – 30 seconds in [Delay], and 1 – 10 shots in [Shots].

SCN															
○	○	○	○	○	○	—	○	○	○	○	○	—	—	—	
○	○	○	○	○	○	—	○	○	○	○	○	—	○	○	
○	○	○	○	○	○	○	○	○	○	○	○	○	—	—	
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
○	○	○	○	○	○	○	○	○	○	—	○	—	—	—	
○	○	○	○	○	○	—	○	○	○	○	○	○	*1	*1	
○	○	○	○	○	○	○	○	○	○	—	*1	—	○	—	
○	○	○	○	○	○	○	○	○	○	—	—	—	—	—	
—	—	*1	—	—	—	—	—	—	—	—	—	○	—	—	
○	○	○	○	○	○	—	○	○	—	—	—	—	—	—	
○	○	○	○	○	○	—	○	○	—	—	○	○	—	—	
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
○	○	○	○	○	○	—	○	○	○	○	—	—	—	—	
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
○	○	○	○	○	○	○	○	○	○	○	—	—	—	—	
○	○	○	○	○	○	—	○	○	○	—	○	—	—	—	
○	○	○	○	○	○	○	*2	○	○	○	○	○	○	○	
○	○	○	○	○	○	○	○	○	○	○	○	○	—	—	
○	○	○	○	○	○	○	○	○	○	○	○	—	—	—	
—	—	—	—	—	—	—	—	—	—	—	○	—	—	—	
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
○	○	○	○	○	○	○	○	○	○	○	○	—	○	○	
○	○	○	○	○	○	○	○	○	○	○	○	—	—	—	
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
○	○	○	○	○	○	○	○	○	○	○	○	○	—	—	
○	○	○	○	○	○	○	○	○	—	○	○	—	—	—	
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	

○ Selectable — Not selectable


Setting Menu

Item	Options/Summary	Ref. Page
Mute	On/Off*	p. 47
Volume	Set all operation sounds (5 levels).	p. 47
LCD Brightness	Set within a range of ± 7 .	p. 48
Power Saving	Auto Power Down: On*/Off Display Off: 10 – 30 sec./1* – 3 min.	p. 138
Time Zone	Home/World	p. 139
Date/Time	Date and time settings	p. 17
Clock Display	0 – 5* – 10 – 30 sec./1 – 3 min.	p. 52
Format	Formats card, erasing all data	p. 50
File Numbering	Continuous*/Auto Reset	p. 140
Create Folder	Create New Folder/Auto Create	pp. 140, 141
Auto Rotate	On*/Off	p. 141
Distance Units	m/cm*/ft/in	p. 85
Lens Retract	1 min.*/0 sec.	p. 141
Language	Select displayed language.	p. 19
Video System	NTSC/PAL	p. 112
Print Method	Auto*/ 	—
Reset All	Returns camera to default settings.	p. 49

* Default setting





About Print Method setting

There is usually no need to change the setting, but select  when you print an image recorded in the **W** (Widescreen) mode at the full page setting for wide paper using a Canon SELPHY CP750/CP740/CP730/CP720/CP710/CP510 Compact Photo Printer. Since this setting is saved even when the power is turned off, ensure that you return the setting to [Auto] to print other image sizes. (However, it cannot be changed while the printer is connected.)

Playback Menu

Item	Options/Summary	Ref. Page
Slide Show	Automatic playback of still images and movies.	p. 107
My Category	Categorizes images.	p. 119
Erase	Erases images.	p. 113
Protect	Protects images.	p. 117

i-Contrast	Corrects dark portions of images.	p. 124
Red-Eye Correction	Corrects red-eye portion of images.	p. 125
Trimming	Trims portions of images.	p. 122
Resize	Resizes and saves images.	p. 121
My Colors	Adjusts colors in images.	p. 123
Sound Memo	Records and attaches sound to images.	p. 127
Sound Recorder	Records audio.	p. 135
Rotate	Rotates images.	p. 120
Transfer Order	Sets images for download to a computer.	p. 129
Set Play button	Registers functions to the  button.	p. 146
Resume	Last seen*/Last shot	p. 146
Transition		p. 111

* Default setting

Print Menu

Item	Options/Summary	Ref. Page
Print	Displays printing screen.	p. 26
Select Images & Qty.	Selects individual images for printing.	p. 133
Select Range	Selects starting and ending images for printing.	p. 134
Select by Date	Selects images for printing by date.	
Select by Category	Selects images for printing by category.	
Select by Folder	Selects images for printing by folder.	
Select All Images	Selects all images for printing.	p. 135
Clear All Selections	Cancels all settings for printing.	p. 135
Print Settings	Sets the printing style.	p. 132

My Camera Menu

Item	Options/Summary	Ref. Page
Theme	Common themes settings.	p. 147
Start-up Image	Selecting the start-up screen when the power is turned on.	
Start-up Sound	Selecting the start-up sound when the power is turned on.	
Operation Sounds	Selecting operation sounds (excluding the shutter button).	
Self-timer Sound	Selecting the self-timer sound.	
Shutter Sound	Selecting the shutter sound.	

Handling Precautions

Equipment

- This camera is a high-precision electronic device. Do not drop it or subject it to strong impact.
- Never place the camera close to magnets or motors that generate strong electromagnetic fields. Exposure to strong magnetic fields may cause malfunctions or corrupt image data.
- If water droplets have fallen or dirt is stuck on the camera or LCD monitor, wipe with a dry soft cloth or eyeglass wiper. Do not rub or apply force.
- Never use cleaners including organic solvents to wipe the camera or LCD monitor.
- Use a commercially available blower brush to remove dust from the lens. For stubborn dirt contact the closest Canon Customer Support Help Desk as listed on the customer support leaflet supplied with your camera.
- When you move the camera rapidly from cold to hot temperatures, condensation may form on the internal or external surfaces of the camera. To avoid condensation, put the camera in an airtight, resealable plastic bag and let it adjust to temperature changes slowly before removing it from the bag.
- When condensation has formed, stop using the camera immediately. Continued use may damage the camera. Remove the battery/batteries and memory card, and wait until the moisture has completely evaporated before resuming use.

Memory Cards

- A memory card is a high-precision electronic device. Do not bend, apply force or subject to strong impact. Doing so may corrupt image data recorded on the memory card.
- Do not spill liquids on the memory card. Do not touch the memory card's terminals with your hands or metallic objects.
- Do not store memory cards near a TV, speakers or other devices that generate magnetism or static electricity. Doing so may corrupt image data recorded on the memory card.
- Do not store memory cards in hot, humid or dusty locations.

Specifications

Camera Effective Pixels	Approx. 14.7 million
Image Sensor	1/1.7-inch type CCD (Total number of pixels: Approx. 15 million)
Lens	7.7 (W) – 28.5 (T) mm 35mm film equivalent: 36 (W) – 133 (T) mm f/2.8 (W) – f/5.8 (T)
Digital Zoom	Approx. 4.0x (Up to approx. 15x in combination with the optical zoom)
Optical Viewfinder	Real-image zoom viewfinder
LCD Monitor	2.5-inch type TFT LCD color monitor Approx. 230,000 dots, Viewfinder coverage 100%
AF Frame Mode	Face Detect/AiAF (9 points)/Center
Servo AF	On/Off
Focusing Range (from end of lens)	Normal: 50 cm (1.6 ft.) – infinity Macro: 5 – 50 cm (2.0 in. – 1.6 ft.) (W)/ 40 – 50 cm (1.3 – 1.6 ft.) (T) Infinity: 3 m (9.8 ft.) – infinity Digital Macro: 5 – 50 cm (2.0 in. – 1.6 ft.) Kids&Pets: 1 m (3.3 ft.) – infinity Manual focus shooting: 5 cm – infinity (2.0 in. – infinity) (W)/40 cm – infinity (1.3 ft. – infinity) (T)
Shutter	Mechanical shutter and electronic shutter
Shutter Speed	1/60 – 1/1600 sec. 15 – 1/1600 sec. (Total shutter speed range)
Image Stabilization	Lens-shift type
Metering Type	Evaluative, Center-weighted average or Spot
Exposure Compensation	±2 stops in 1/3-stop increments
ISO speed (Standard Output Sensitivity, Recommended Exposure Index)	Auto, High ISO Auto, ISO 80/100/200/400/800/1600
White Balance	Auto, Day Light, Cloudy, Tungsten, Fluorescent, Fluorescent H, Custom
Built-in Flash	Auto, On, Off * Red-eye reduction/Red-eye correction/ Slow Synchro settings available/Flash Exposure compensation (1/3 steps)/Flash output (3 levels)/FE Lock available
Built-in Flash Range	50 cm – 4.6 m (1.6 – 15 ft.) (W)/ 50 cm – 2.4 m (1.6 – 7.9 ft.) (T)
Shooting Modes	Auto Mode: Auto P/M Mode: Program AE/Manual Quick shot mode Special scene mode: Portrait, Night Snapshot, Kids&Pets, Indoor, Sunset, Foliage, Snow, Beach, Fireworks, Aquarium, Underwater, ISO3200, Digital Macro, Color Accent, Color Swap, Stitch Assist

Specifications

	Movie Mode: Standard, Color Accent, Color Swap
Continuous Shooting	Approx. 1.3 images/sec.
Self-timer	Face Self-Timer, Approx. 10-sec./Approx. 2-sec. delay, Custom Timer
i-Contrast	Auto/Off
Recording Media	SD memory card, SDHC memory card, MultiMediaCard, MMCplus memory card, HC MMCplus memory card
File Format	Design rule for camera file system and DPOF compliant
Data Type	Still images: Exif 2.2 (JPEG) Movies: MOV (Image data: H.264, Audio data: Linear PCM) (Mono) Voice Memo, Sound Recorder: WAVE (Mono)
Compression	Superfine, Fine, Normal
Number of Recording Pixels (Still images)	Large: 4416 x 3312 pixels Medium 1: 3456 x 2592 pixels Medium 2: 2592 x 1944 pixels Medium 3: 1600 x 1200 pixels Small: 640 x 480 pixels Widescreen: 4416 x 2480 pixels
(Movies)	640 x 480 pixels (30 frames/sec.) 320 x 240 pixels (30 frames/sec.)
Number of Possible shots	LCD monitor on: approx. 280 images (CIPA Standard compliant). LCD monitor off: approx. 700 images.
Audio	Quantization: 16 bit Sampling Rate Voice Memo: 11.025 kHz Movies: 44.100 kHz Sound Recorder: 11.025 kHz/22.050 kHz/44.100 kHz
Playback Function	Single Image Playback, Video Playback, Magnified Focus, Index Playback, Magnified Playback, Jump, Slide Show
Editing Function	Erase, Protect, My Category, Resize, My Colors, i-Contrast, Trimming, Rotate, Red-Eye Correction, Voice Memo, Sound Recorder
Direct Print Type	PictBridge, Canon Direct Print, Bubble Jet Direct capable
Interface	Hi-Speed USB (Dedicated connector (female) with unified type of digital, audio and video*) * mini-B compatible Video/Audio output (NTSC and PAL capable, mono audio)

Communication Settings	MTP, PTP
Power	Battery Pack NB-5L (rechargeable lithium-ion battery) AC adapter kit ACK-DC30
Operating Temperatures	0 – 40° C (32 – 104° F)
Operating Humidity	10 – 90%
Dimensions (excluding protrusions)	96.7 x 62.2 x 27.9 mm (3.81 x 2.45 x 1.10 in.)
Weight (camera body only)	Approx. 160 g (5.64 oz.)

Battery Pack NB-5L

Type	Rechargeable lithium-ion battery
Voltage	3.7 V DC
Capacity	1120 mAh
Charging cycles	Approx. 300 times
Operating temperature	0 – 40° C (32 – 104° F)
Dimensions	32.0 x 44.9 x 7.9 mm (1.26 x 1.77 x 0.31 in.)
Weight	Approx. 25 g (0.88 oz.)

Battery Charger CB-2LX/CB-2LXE

Rated input	100 – 240 V AC (50/60 Hz), 0.085 A (100 V) – 0.05 A (240 V)
Rated output	4.2 V DC, 0.7 A
Charge time	Approx. 2 hours 5 min.
Operating temperature	0 – 40° C (32 – 104° F)
Dimensions	57.5 x 81.6 x 21.0 mm (2.26 x 3.21 x 0.83 in.)
Weight	Approx. 65 g (2.29 oz.) (CB-2LX) Approx. 59 g (2.08 oz.) (CB-2LXE) (excluding power cord)

- All data is based on tests by Canon.
- The finished product, or exterior may differ from this report.



USA and Canada only:

The Lithium ion/polymer battery that powers the product is recyclable.

Please call 1-800-8-BATTERY for information on how to recycle this battery.

When connecting to and using a household power outlet, use only AC Adapter Kit ACK-DC30 (rated input: 100 – 240 V AC 50/60 Hz, rated output: 4.3 V DC). Using anything else can cause fire, overheating, or electrical shock.

Index

Numerics

3:2 Guide 144

A

AC Adapter Kit 38, 150
Accessories 36
AE Lock 87
AF → Auto Focus
AF Frame 22
AF Lock 84
AiAF 82
Aquarium (Scene Mode) 56
Audio 47
AV Cable 2, 112

B

Battery
Battery Charger 2, 12, 38
Charge Indicator 13
Date/Time Battery 18
Power Saving 51
Recharge 12
Battery Charger 12
Beach (Scene Mode) 55
Black and White Images 73

C

Camera Shake 57, 145
Canon Digital Camera Solution Disk 2, 31
Clock Function 52
Color Accent (Scene Mode) 93, 98
Color Swap (Scene Mode) 94, 98
Components Guide 40
Compression → Image Quality
Continuous Shooting 72
Control Dial 39, 41

D

Date and Time
Adding to Image 60
Changing 18
Date/Time Battery 18
Settings 17
Date and Time → Date/Time

Default Settings 49
Deleting → Erasing
Digital Macro (Scene Mode) 64
Digital Tele-Converter 59
Digital Zoom 58
Direct Print 27
Direct Print User Guide 2
Display Language 19
Display Overlay 144
DPOF 129, 131, 132

E

Editing
i-Contrast 124
My Colors 123
Red-Eye Correction 125
Resizing (Making Images Smaller) 121
Rotating Images 120
Trimming 122
Enlarged Display 111
Equipment
Default Settings 49
Holding the Camera 11
Erase All 113
Erasing All Images 113
Erasing Images 25
Error Messages 154
Exposure
AE Lock 87
Correction 72
FE Lock 88

F

Face Detect 82
Face Selection 86
Face Self-Timer 62
Factory Settings → Default Settings
FE Lock 88
File Number 140
Fireworks (Scene Mode) 56
Flash
Off 57
On 67
Supplementary Flash 38, 150

- Focus
- AF Frame 22
 - AF Frame Mode 82
 - AF Lock 84
 - AF-Point Zoom 83
 - Face Selection 86
 - Manual Focus 85
 - Servo AF 84
 - Focus Check 110
 - Focus Lock 78
 - Format → Memory Card, Formatting
 - Formatting (Memory Card) 50
 - FUNC. Menu
 - Basic Operations 45
 - List 156
- G**
- Green Leaves/Autumn Foliage (Scene Mode) 55
 - Grid Lines 144
- H**
- High Speed (ISO) 56, 70
 - High-Power Flash 38, 150
 - Histogram 44
 - Household Power 150
- I**
- i-Contrast 91, 124
 - Image Quality (Compression Ratio) 68
 - Images
 - Display Time 52
 - Editing → Editing
 - Erasing Images 25
 - Playback → View
 - Protect 117
 - Indoor (Scene Mode) 55
 - Infinity 67
 - Interface Cable 2, 26, 31
 - ISO Speed 70
 - ISO3200 (Scene Mode) 56
- K**
- Kids&Pets (Scene Mode) 54
- L**
- Lamp 40, 61, 142, 143
 - LCD monitor → Screen
- M**
- Manual 85
 - Manual Exposure 89
 - Manual Focus 85
 - Memory Cards 14, 16
 - Available Shots 16
 - Formatting 50
 - Menu
 - Basic Operations 46
 - List 158
 - Metering Mode 87
 - MMCplus/HC MMCplus Memory Card 16
 - Mode Dial 40
 - Movies
 - Editing 101
 - Image Quality (Frame Rate) 99
 - Mode 98
 - Recording Pixels 99
 - Shooting Time 29, 99
 - Viewing (Playback) 30
 - MultiMediaCard → Memory Card
 - My Camera 147
 - My Category 119
 - My Colors 73, 123
- N**
- Night Snapshot (Scene Mode) 54
 - Number of Shots 13, 62
- P**
- Panoramic Photos 96
 - PictBridge 26
 - Playback → View
 - Playback Button 24, 146
 - Playback With Transition Effects 111
 - Portrait (Scene Mode) 54
 - Postcard Size 69
 - Power → Battery
 - Power Button 40
 - Power Saving 51
 - Print Settings (DPOF) 131

- Print/Share Button 26, 145
 Printer 26, 27
 Printing 26
 Program AE 66
 Protect 117
- R**
- Recording Pixels (Image Size) 68
 Red-Eye
 Auto Correction 92
 Correction 125
 Reduction 142
 Resizing (Making Images Smaller) 121
 Rotating Images 120
- S**
- SCN (Scene Mode) 54
 Screen
 Display Language 19
 Information Displayed 42
 Menu Operations 45, 46
 Switching the Display 42, 43
 SD/SDHC Memory Card 16
 Self-Timer
 10 second Self-Timer 61
 Changing Delay and
 Number of Shots 75
 Face Self-Timer 62
 Shoot 62
 Two Second Self-Timer 74
 Sepia Tones 73
 Servo AF 84
 Shooting Date and Time → Date/Time
 Shooting Using a TV 76
 Shooting With Macro 63
 Shutter Button 20
 Slide Show 107
 Snow (Scene Mode) 55
 Software
 Canon Digital Camera Solution Disk . 2, 31
 Software Starter Guide 2
 Transferring Images to a Computer 31
 Sound Memos 127
 Sound Recorder 135
 Stitch Assist (Scene Mode) 96
- Strap 2, 11
 Sunset (Scene Mode) 55
 Supplementary Flash 38, 150
- T**
- Terminal 26, 112
 Tone (White Balance) 71
 Transferring Images to a Computer . 31, 128
 Trimming 122
- U**
- Underwater (Scene Mode) 56
- V**
- Video → Movies
 Viewfinder 76
 Viewing (Playback)
 Enlarged Display 111
 Index Display 104
 Single Image Playback 24
 Slide Show 107
 Viewing Images on a TV 112
 Viewing Images on a TV 112
- W**
- Waterproof Case 38
 White Balance 71
 Wide (Recording Pixels) 68, 69
 World Clock 139
 Wrist Strap → Strap
- Y**
- You Think There is a Problem 151
- Z**
- Zoom 21, 28, 58

FCC Notice

(Digital Camera, Model PC1332 systems)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions;

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The cable with the ferrite core provided with the digital camera must be used with this equipment in order to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A., Inc.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

Tel No. (516) 328-5600

Canadian Radio Interference Regulations

This Class B digital apparatus complies with Canadian ICES-003.

Réglementation canadienne sur les interférences radio

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Battery Charger CB-2LX

This product is not intended to be serviced. Should the product cease to function in its intended manner, it should be returned to the manufacturer or be discarded.

This power unit is intended to be correctly orientated in a vertical or floor mount position.

IMPORTANT SAFETY INSTRUCTIONS-SAVE THESE INSTRUCTIONS.

DANGER-TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

For connection to a supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet.

This battery charger is for exclusive use with Battery Pack NB-5L (1.12 Ah). There is a danger of explosion if other battery packs are used.

Trademark Acknowledgments

- The SDHC logo is a trademark.

Disclaimer

- While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions.
- Canon reserves the right to change the specifications of the hardware and software described herein at anytime without prior notice.
- No part of this guide may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without the prior written permission of Canon.
- Canon makes no warranties for damages resulting from corrupted or lost data due to a mistaken operation or malfunction of the camera, the software, SD memory cards (SD cards), personal computers, peripheral devices, or use of non-Canon SD cards.

MEMO

MEMO

MEMO

MEMO

MEMO

MEMO

MEMO

MEMO

MEMO